

Standard Equipment , (L0L)

From January 2011




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Steering Column Electronics Control Module


- J527 Steering Column Electronics Control Module
- J623 Engine/Motor Control Module
- ST1 Fuse Panel 1
- ST2 Fuse Panel 2
- SC6 Fuse 6 (On Fuse Panel C)
- SC7 Fuse 7 (On Fuse Panel C)
- T16e 16-Pin Connector
- T17b 17-Pin Connector, Left Plenum Chamber E-Box Connector Station
- T17i 17-Pin Connector, Near the A-Pillar
- * Refer to Applicable Wiring Diagram for Fuse Positions
- *2 Refer to Applicable Engine Wiring Diagram
- *3 For Vehicles with Heated Steering Wheel

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

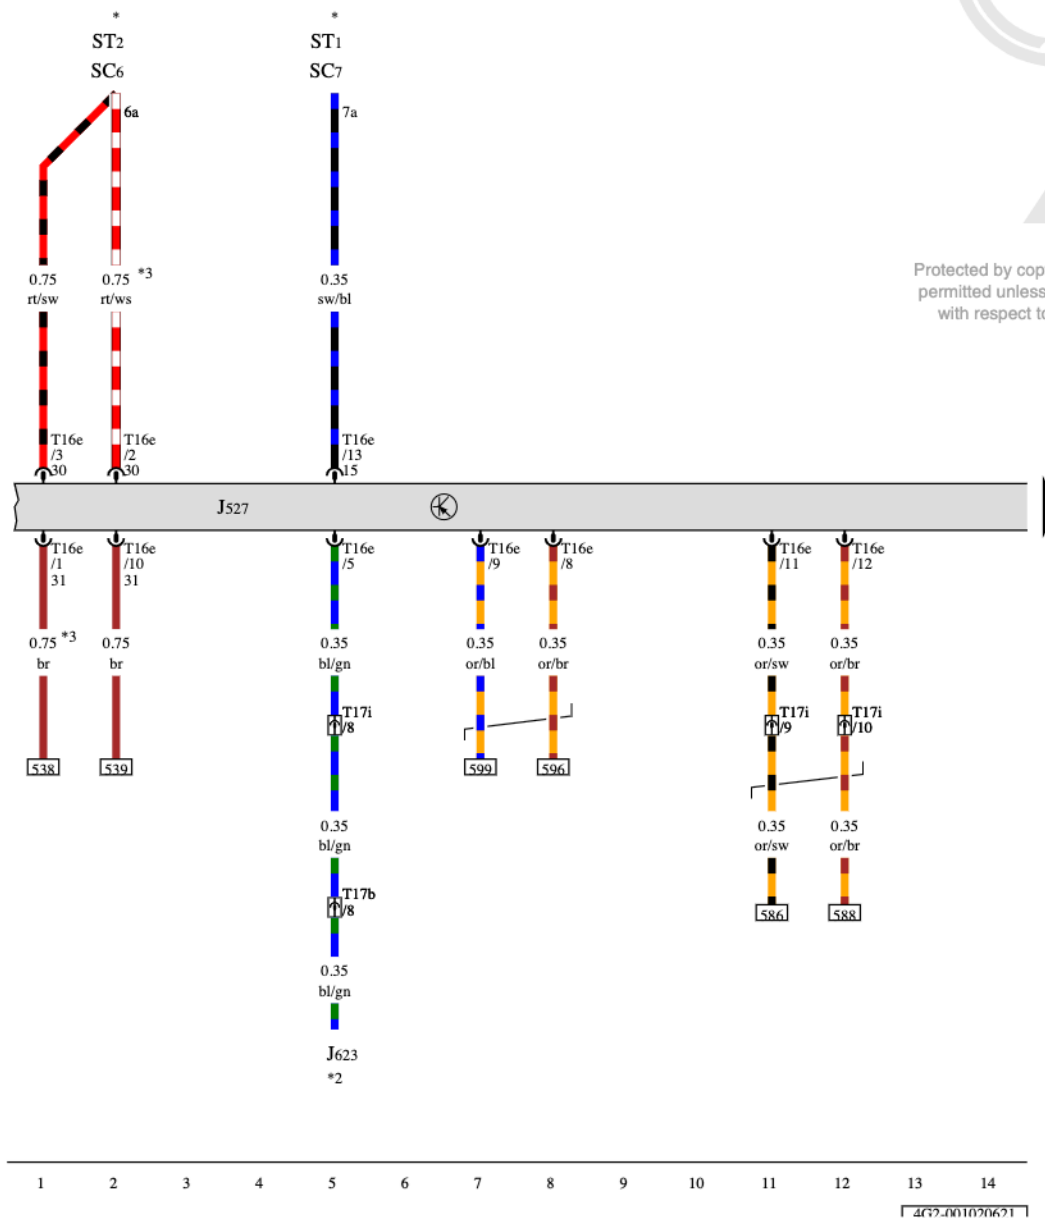

Steering Column Electronics Control Module


- E2 Turn Signal Switch
- E5 Headlamp Flasher Switch
- E22 Windshield Wiper Intermittent Mode Switch
- E45 Cruise Control Switch
- F350 Spiral Spring
- G85 Steering Angle Sensor
- H Signal Horn Activation
- J527 Steering Column Electronics Control Module
- T6am 6-Pin Connector
- T13b 13-Pin Connector

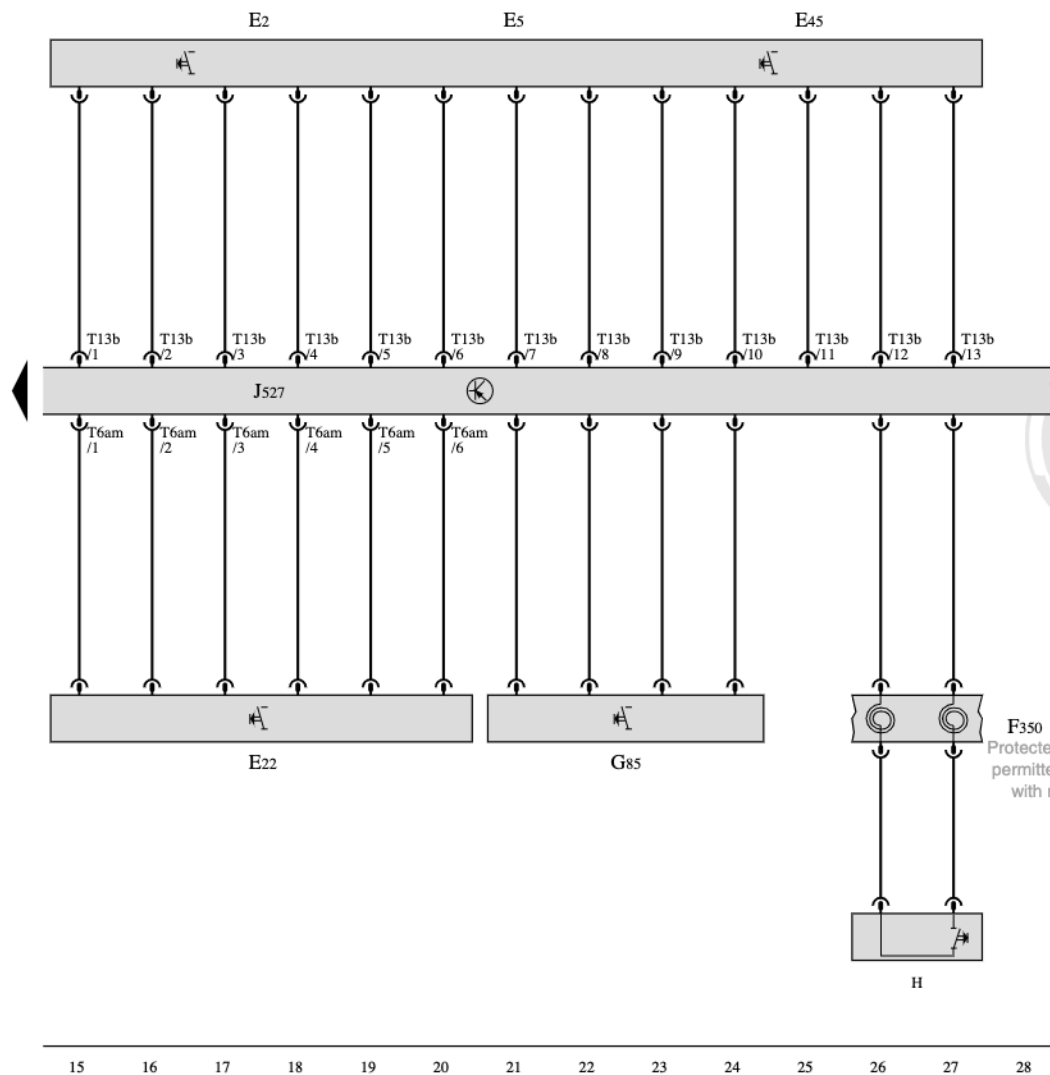

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Steering Column Adjustment Switch, Vehicle Electrical System Control Module, Power Adjustable Steering Column Control Module

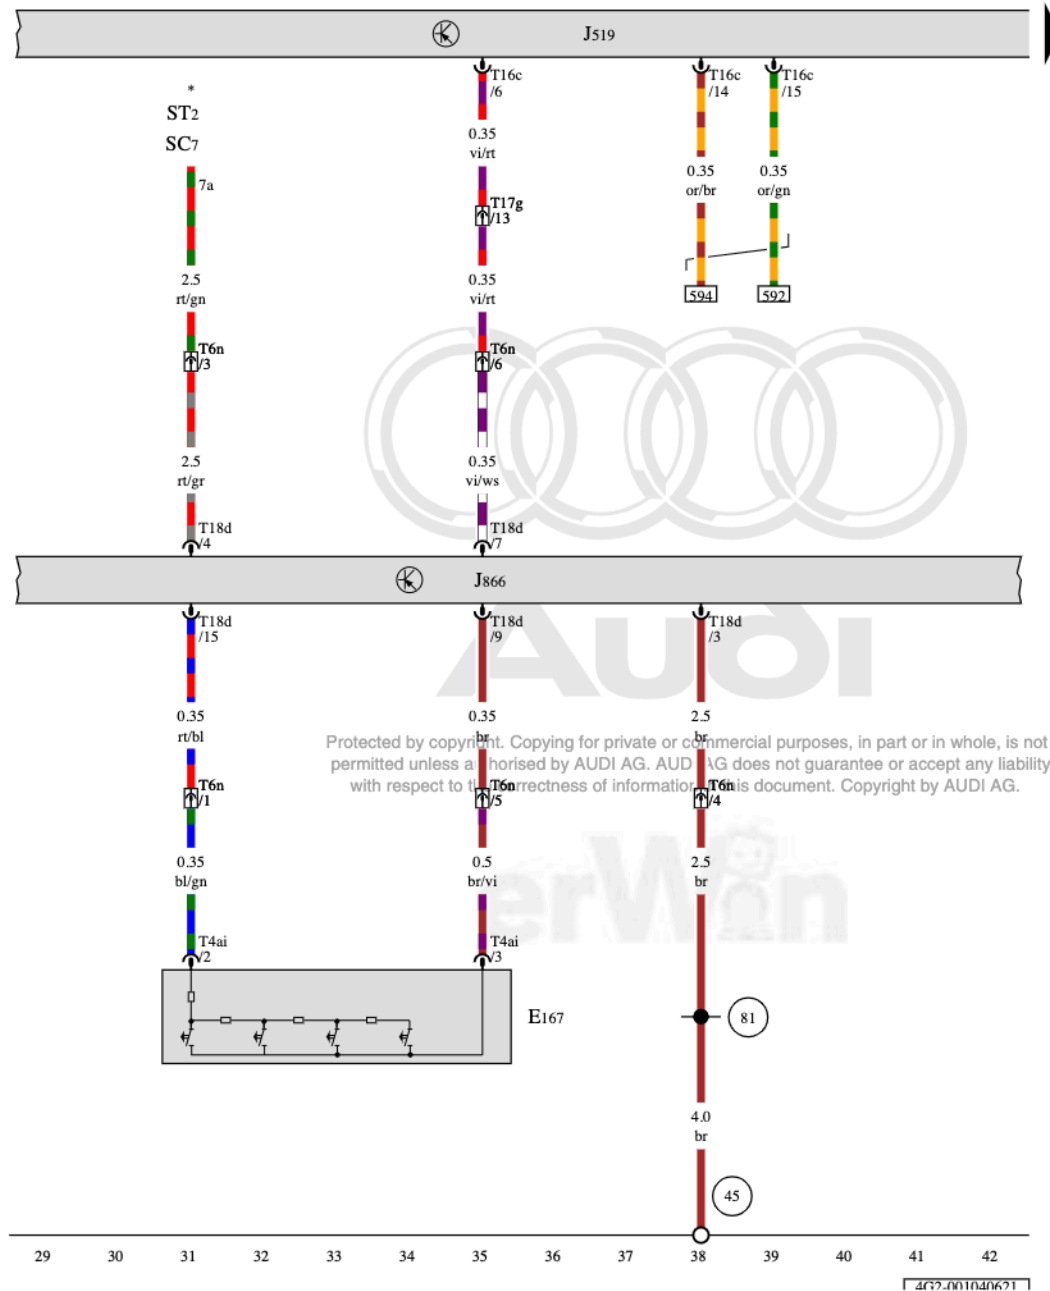

- E167 Steering Column Adjustment Switch
- J519 Vehicle Electrical System Control Module
- J866 Power Adjustable Steering Column Control Module
- ST2 Fuse Panel 2
- SC7 Fuse 7 (On Fuse Panel C)
- T4ai 4-Pin Connector
- T6n 6-Pin Connector, Behind the Steering Column Trim Panel
- T16c 16-Pin Connector
- T17g 17-Pin Connector, Near the A-Pillar
- T18d 18-Pin Connector

- 45 Ground Connection Behind Instrument Panel, Center
- 81 Ground Connection 1 (in Instrument Panel Wiring Harness)
- * Refer to Applicable Wiring Diagram for Fuse Positions

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink


Vehicle Electrical System Control Module

J519 Vehicle Electrical System Control Module
SD6 Fuse 6 (On Fuse Panel D)
SD7 Fuse 7 (On Fuse Panel D)
SD8 Fuse 8 (On Fuse Panel D)
SD9 Fuse 9 (On Fuse Panel D)
T17c 17-Pin Connector
T17d 17-Pin Connector
T17e 17-Pin Connector


44 Ground Connection on A-Pillar, Lower Left

369 Ground Connection 4 (in Main Wiring Harness)

* Refer to Applicable Wiring Diagram for Fuse Positions
*2 Depending on Equipment

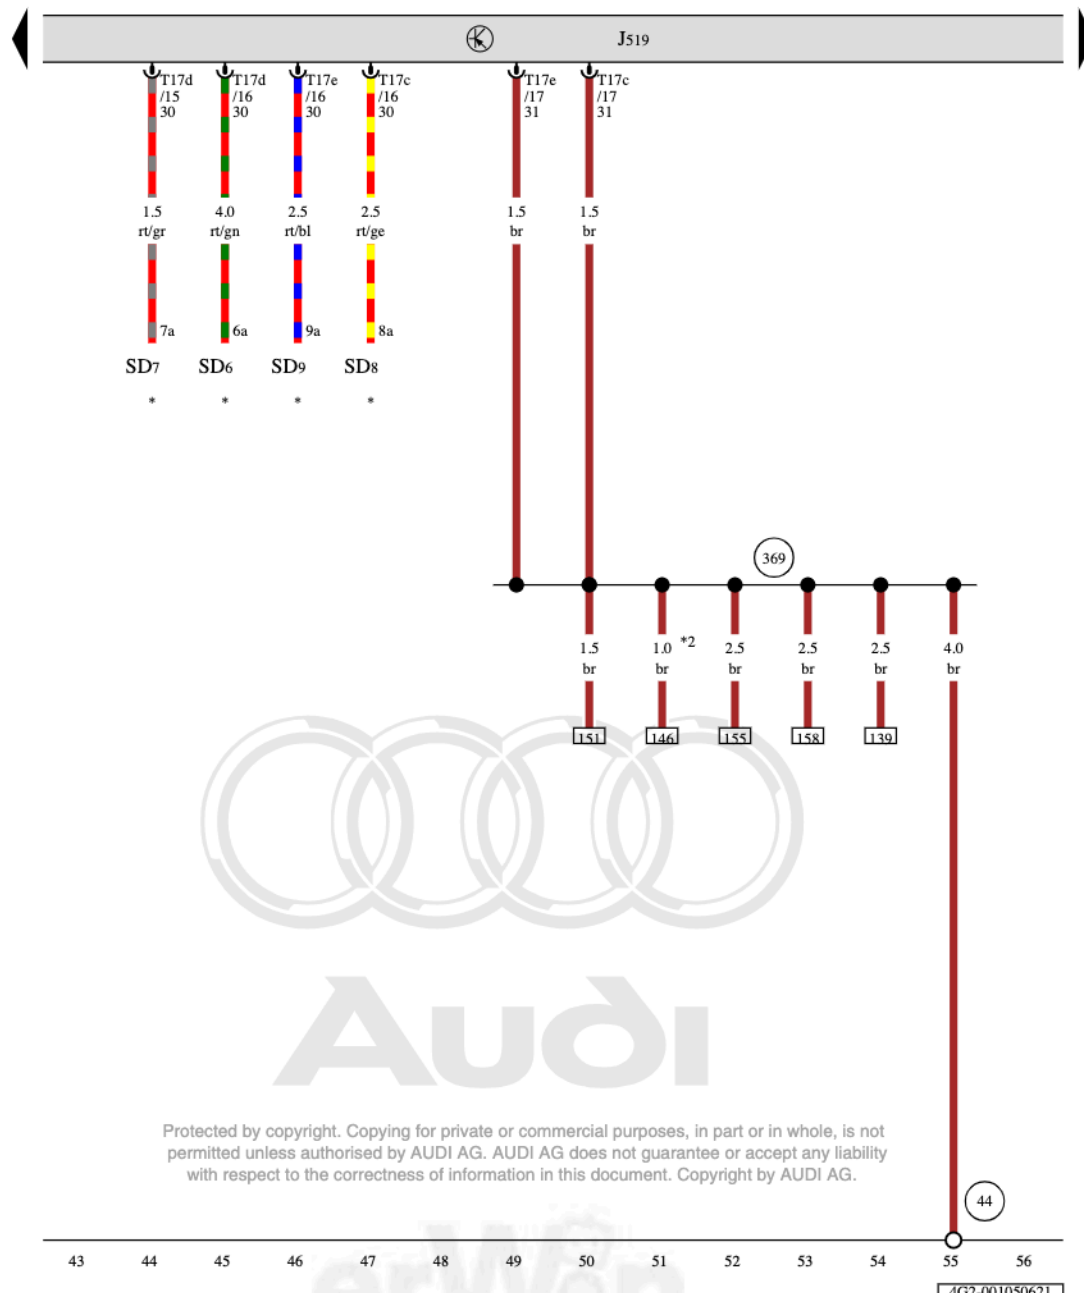

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

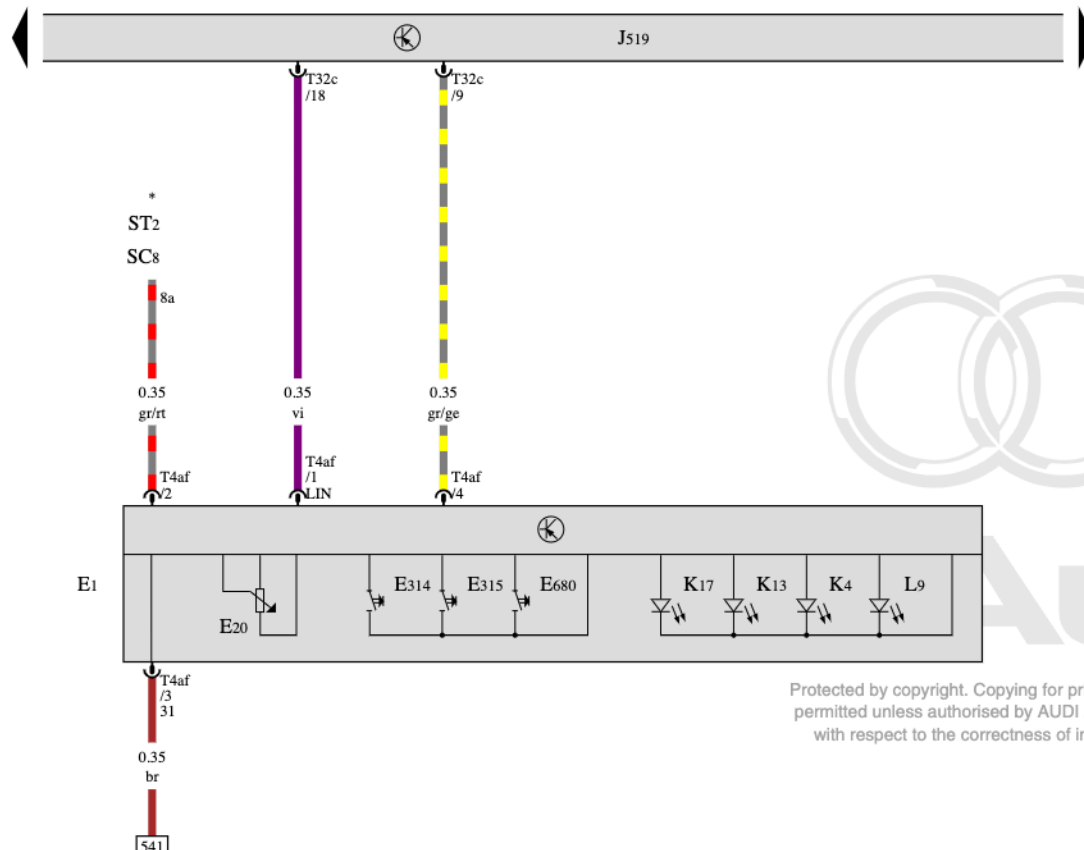

Light Switch, Instrument Panel and Switch Illumination Dimmer Switch, Rear Fog Lamp Button, Fog Lamp Button, Night Vision System Button, Vehicle Electrical System Control Module

- E1 Light Switch
- E20 Instrument Panel and Switch Illumination Dimmer Switch
- E314 Rear Fog Lamp Button
- E315 Fog Lamp Button
- E680 Night Vision System Button
- J519 Vehicle Electrical System Control Module
- K4 Position Lamp Indicator Lamp
- K13 Rear Fog Lamp Indicator Lamp
- K17 Fog Lamp Indicator Lamp
- L9 Headlamp Switch Illumination Bulb
- ST2 Fuse Panel 2
- SC8 Fuse 8 (On Fuse Panel C)
- T4af 4-Pin Connector
- T32c 32-Pin Connector
- * Refer to Applicable Wiring Diagram for Fuse Positions

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Emergency Flasher Button, Vehicle Electrical System Control Module

- E149 Rear Window Shade Switch
- E229 Emergency Flasher Button
- E266 Parking Aid Button
- J446 Parking Aid Control Module
- J519 Vehicle Electrical System Control Module
- K6 Emergency Flasher Indicator Lamp
- K136 Parking Aid Indicator Lamp
- L156 Switch Illumination Bulb
- T5u 5-Pin Connector
- T6ai 6-Pin Connector
- T10k 10-Pin Connector
- T17g 17-Pin Connector, Near the A-Pillar
- T32c 32-Pin Connector


A175 Connection 58s (in Instrument Panel Wiring Harness)

* For Vehicles with Park Distance Control (PDC)



Copyrighted by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

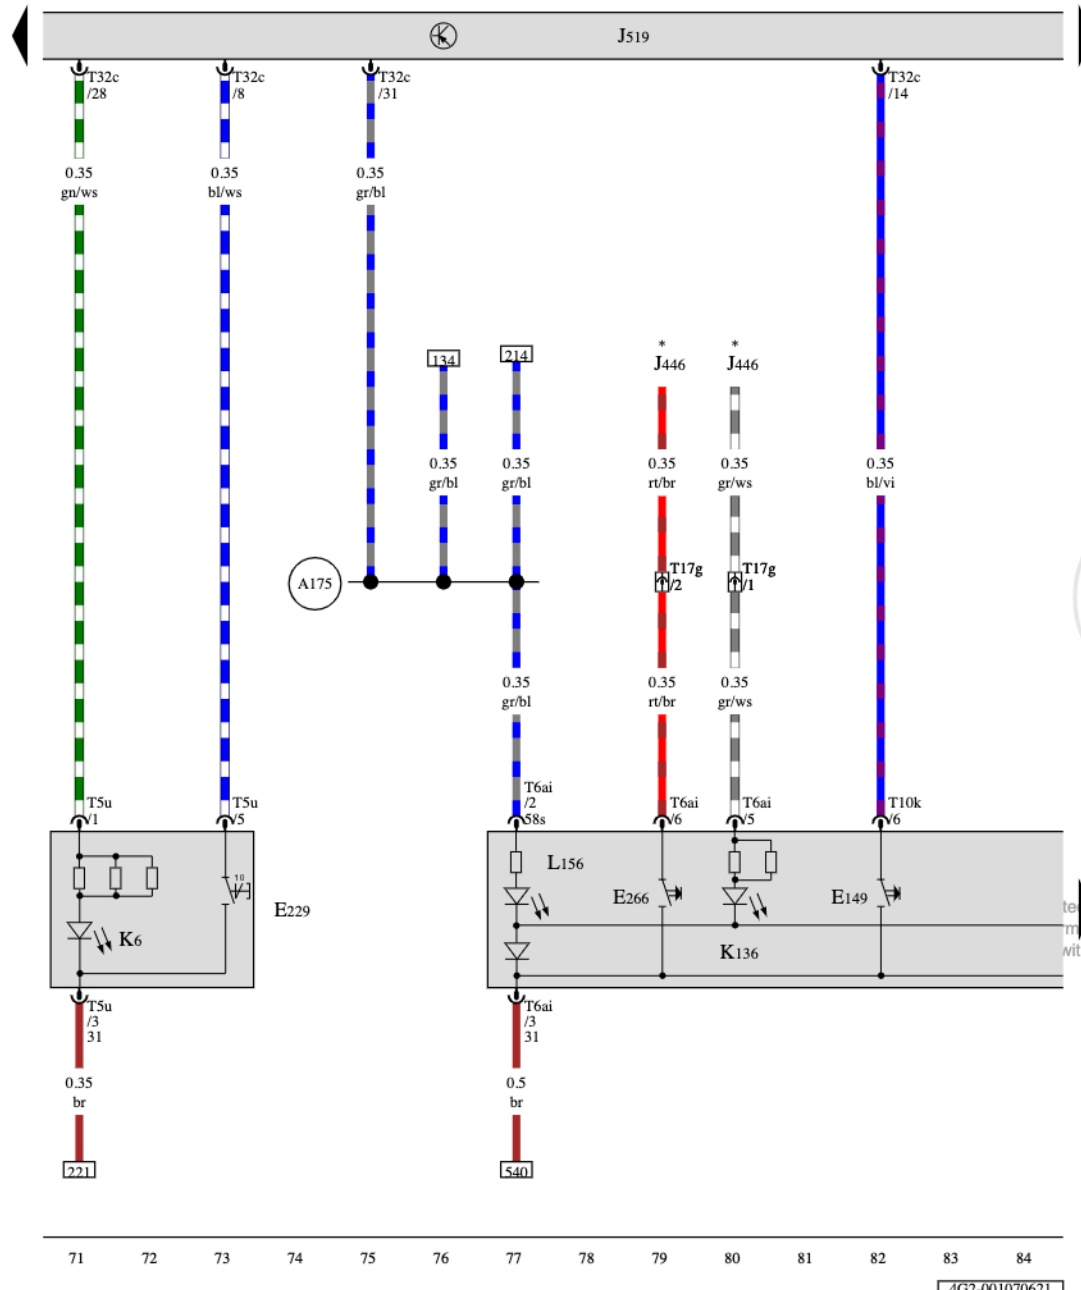


Vehicle Electrical System Control Module


- E256 ASR/ESP Button
- E581 Parallel Parking Assistance Button
- E693 Start/Stop Mode Button
- J104 ABS Control Module
- J234 Airbag Control Module
- J519 Vehicle Electrical System Control Module
- J791 Parallel Parking Assistance Control Module
- K145 Front Passenger Airbag -Disabled- Indicator Lamp
- K241 Parallel Parking Assistance Indicator Lamp
- K259 Start/Stop Mode Indicator Lamp
- ST1 Fuse Panel 1
- SB1 Fuse 1 (On Fuse Panel B)
- T6ai 6-Pin Connector
- T10k 10-Pin Connector
- T17h 17-Pin Connector, Near the A-Pillar
- T17i 17-Pin Connector, Near the A-Pillar
- T17q 17-Pin Connector, Near the A-Pillar
- T32c 32-Pin Connector
- B281 Positive Connection 5 (15a) (in Main Wiring Harness)
- * Refer to Applicable Wiring Diagram for ABS
- *2 For Vehicles with Parallel Parking Assistance
- *3 Refer to Applicable Wiring Diagram for Fuse Positions
- *4 Refer to Applicable Airbag Wiring Diagram
- *5 For Vehicles with Key Switch for Deactivating Front Passenger Airbag/Thorax Airbag/Seat Belt Latch Monitoring

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink

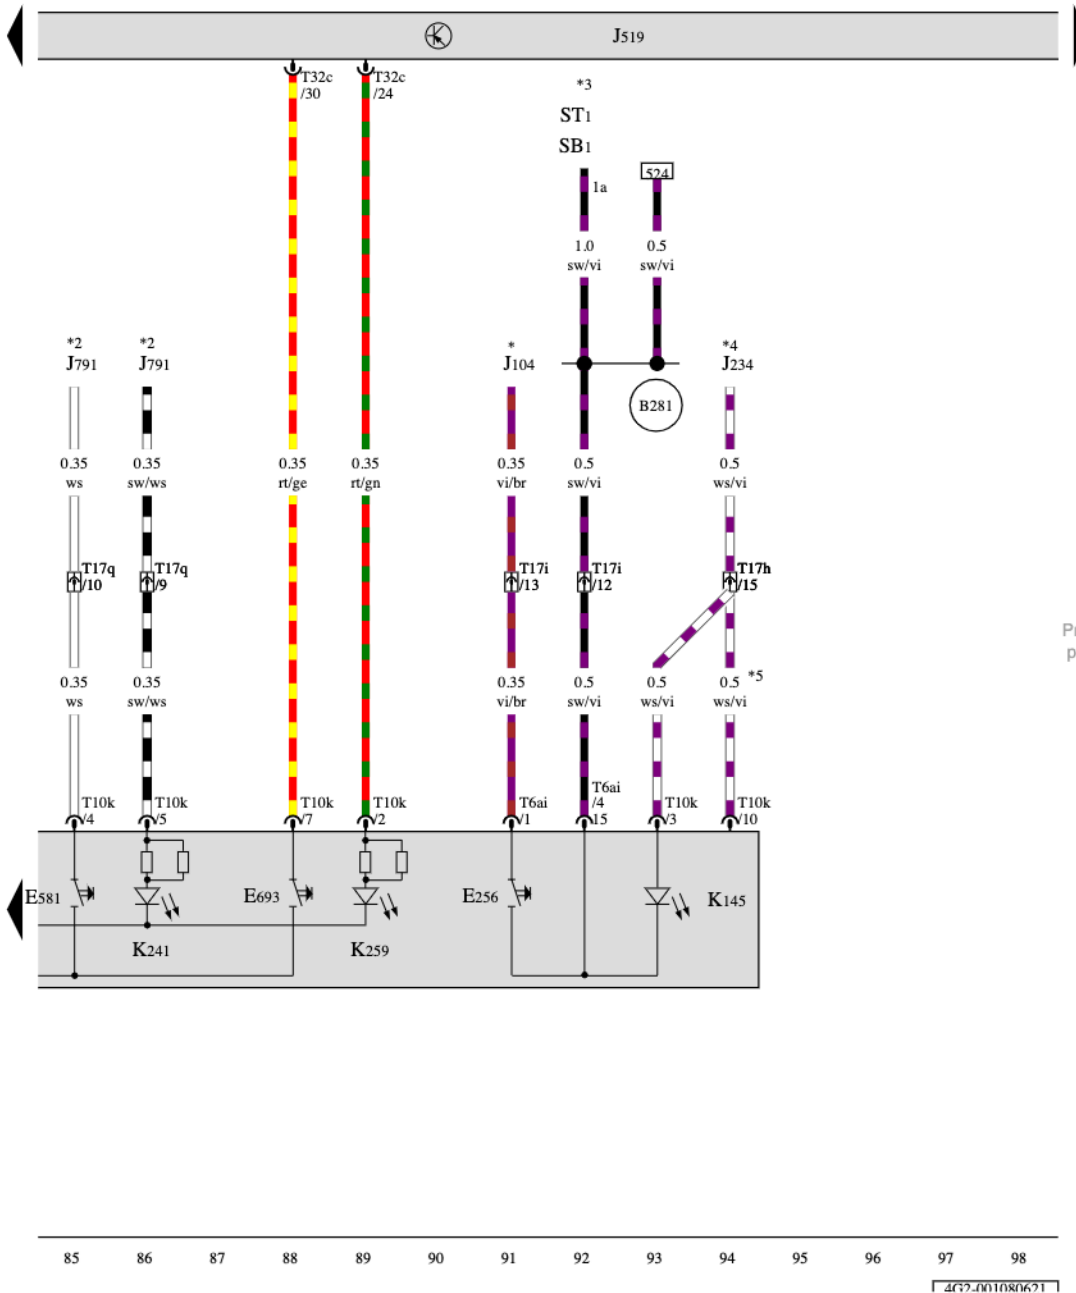


Vehicle Electrical System Control Module, Left Position
Lamp Bulb, Left Front Turn Signal Bulb, Left High Beam
Headlamp Bulb, Left Front Side Marker Lamp Bulb

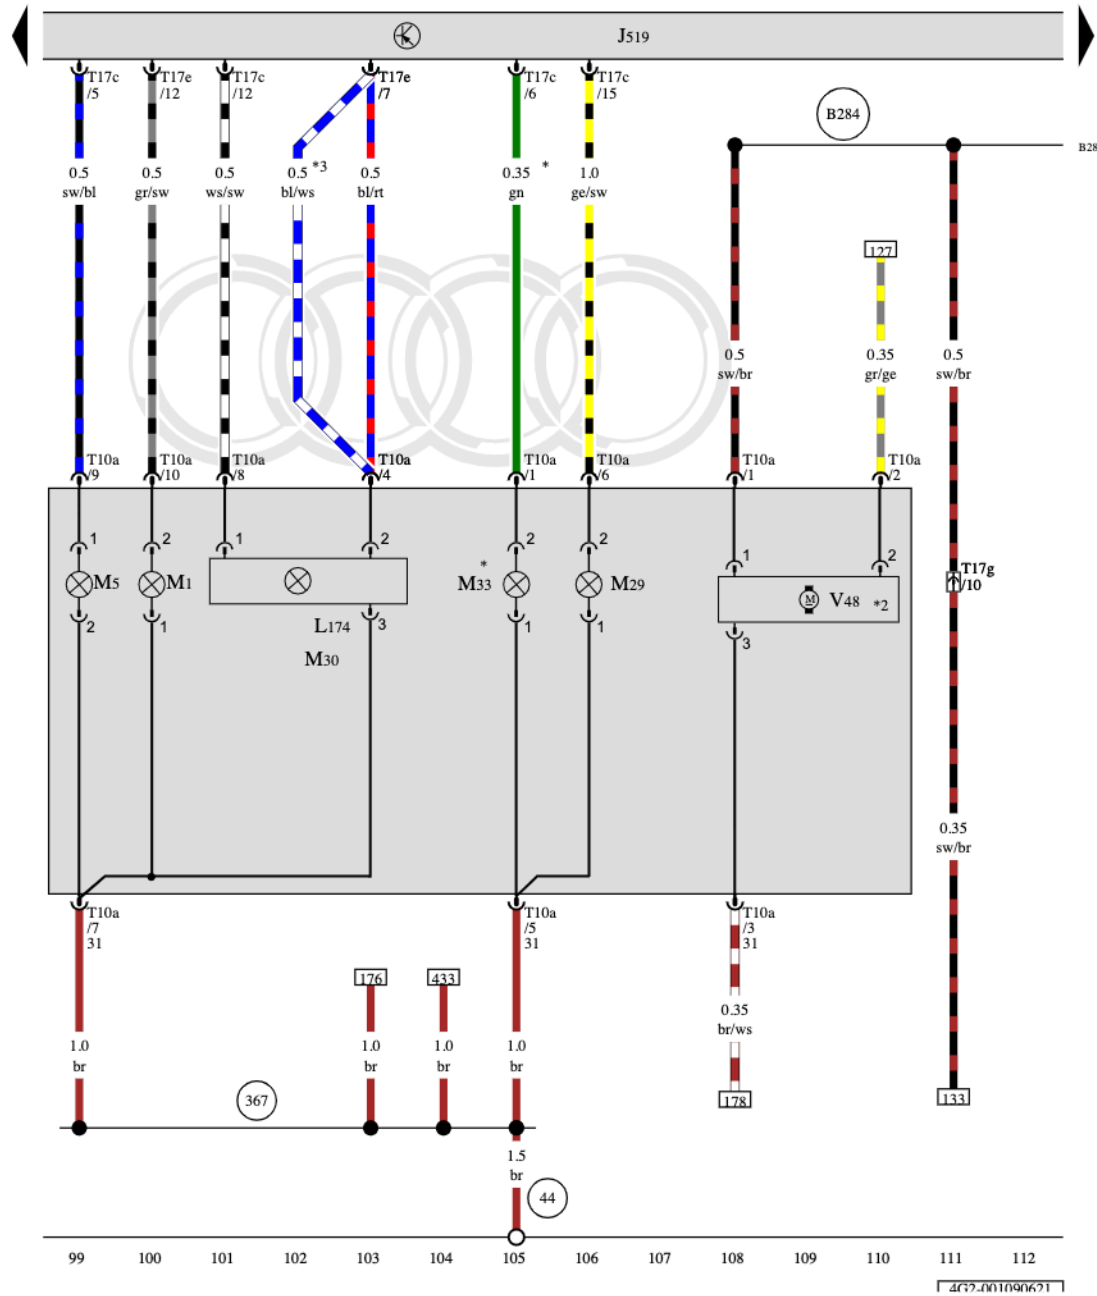

- | | |
|------|--|
| J519 | Vehicle Electrical System Control Module |
| L174 | Left Daytime Running Lamp Bulb |
| M1 | Left Position Lamp Bulb |
| M5 | Left Front Turn Signal Bulb |
| M29 | Left Low Beam Headlamp Bulb |
| M30 | Left High Beam Headlamp Bulb |
| M33 | Left Front Side Marker Lamp Bulb |
| T10a | 10-Pin Connector |
| T17c | 17-Pin Connector |
| T17e | 17-Pin Connector |
| T17g | 17-Pin Connector, Near the A-Pillar |
| V48 | Left Headlamp Range Control Adjustment Motor |
| 44 | Ground Connection on A-Pillar, Lower Left |
| 367 | Ground Connection 2 (in Main Wiring Harness) |
| B284 | Positive Connection 8 (15a) (in Main Wiring Harness) |
| * | For USA Only |
| *2 | For Vehicles with Headlamp Range Control |
| *3 | From June 2011 |

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

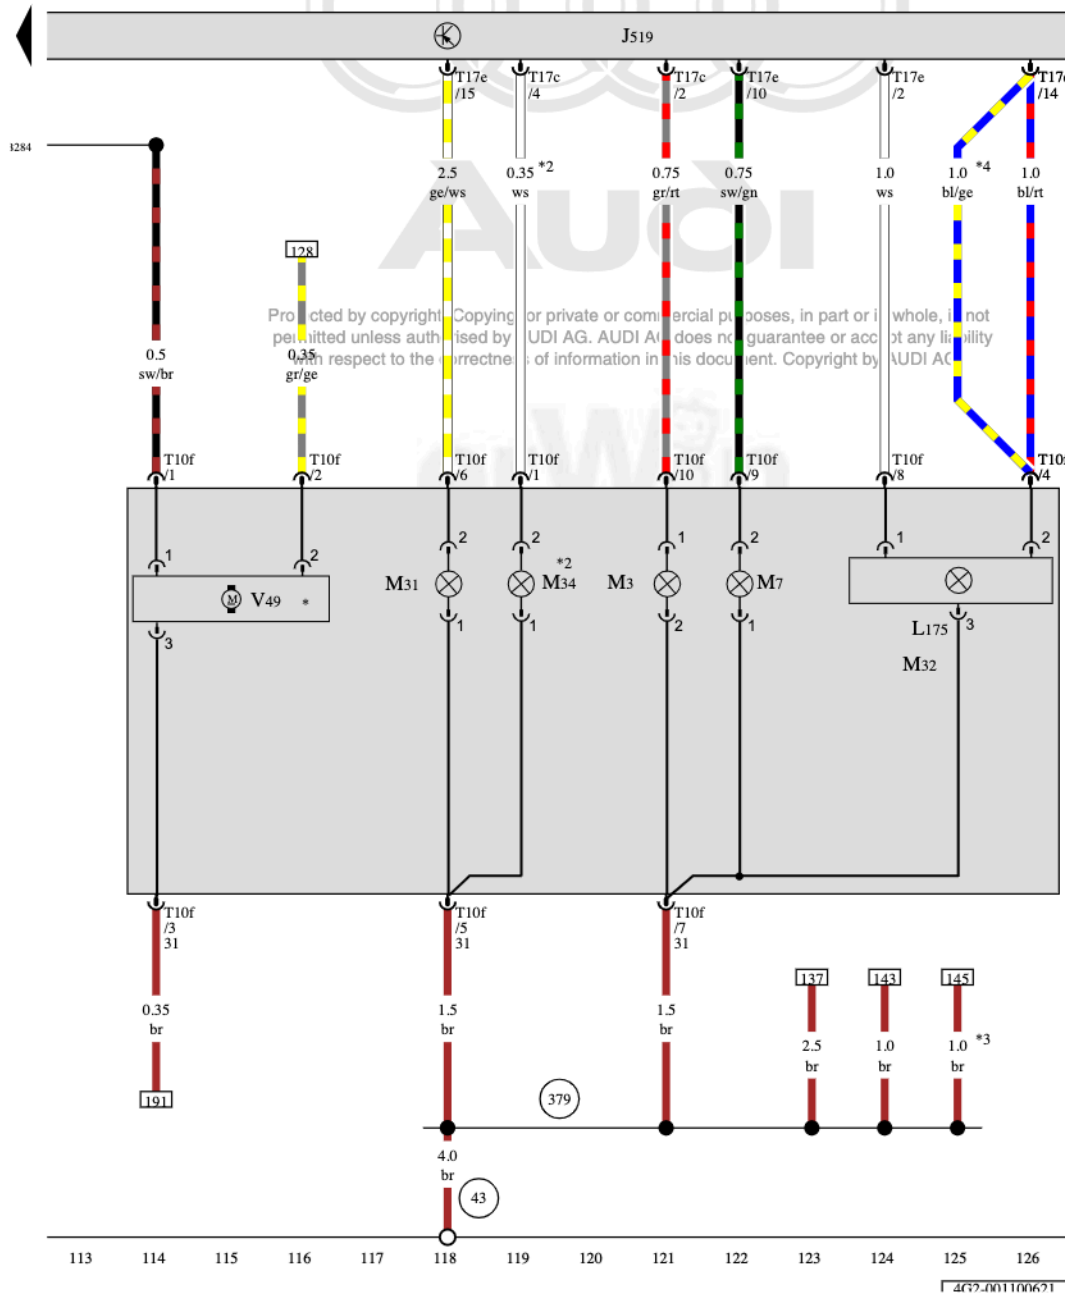


Vehicle Electrical System Control Module, Right Position Lamp Bulb, Right Front Turn Signal Bulb, Right Low Beam Headlamp Bulb, Right High Beam Headlamp Bulb

- J519 Vehicle Electrical System Control Module
- L175 Right Daytime Running Lamp Bulb
- M3 Right Position Lamp Bulb
- M7 Right Front Turn Signal Bulb
- M31 Right Low Beam Headlamp Bulb
- M32 Right High Beam Headlamp Bulb
- M34 Right Front Side Marker Lamp Bulb
- T10f 10-Pin Connector
- T17c 17-Pin Connector
- T17e 17-Pin Connector
- V49 Right Headlamp Range Control Adjustment Motor

- 43 Ground Connection on A-Pillar, Lower Right
- 379 Ground Connection 14 (in Main Wiring Harness)
- B284 Positive Connection 8 (15a) (in Main Wiring Harness)
- * For Vehicles with Headlamp Range Control
- *2 For USA Only
- *3 Depending on Equipment
- *4 From June 2011

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

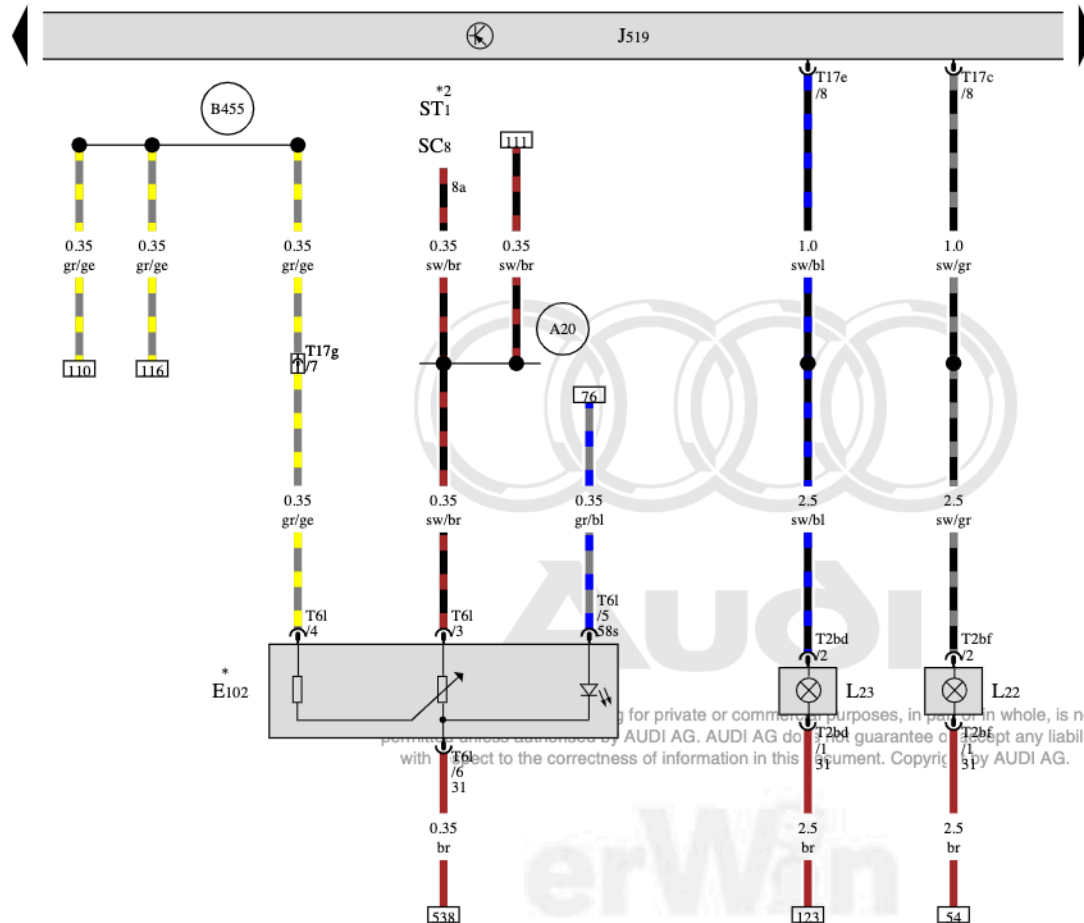


Headlamp Range Control Adjuster, Vehicle Electrical System Control Module, Left Front Fog Lamp Bulb, Right Front Fog Lamp Bulb

- E102 Headlamp Range Control Adjuster
- J519 Vehicle Electrical System Control Module
- L22 Left Front Fog Lamp Bulb
- L23 Right Front Fog Lamp Bulb
- ST1 Fuse Panel 1
- SC8 Fuse 8 (On Fuse Panel C)
- T2bd 2-Pin Connector
- T2bf 2-Pin Connector
- T6l 6-Pin Connector
- T17c 17-Pin Connector
- T17e 17-Pin Connector
- T17g 17-Pin Connector, Near the A-Pillar

- A20 Positive Connection 15a (in Instrument Panel Wiring Harness)
- B455 Headlamp Range Control Connection (in Main Wiring Harness)

- * For Vehicles with Headlamp Range Control
- *2 Refer to Applicable Wiring Diagram for Fuse Positions

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

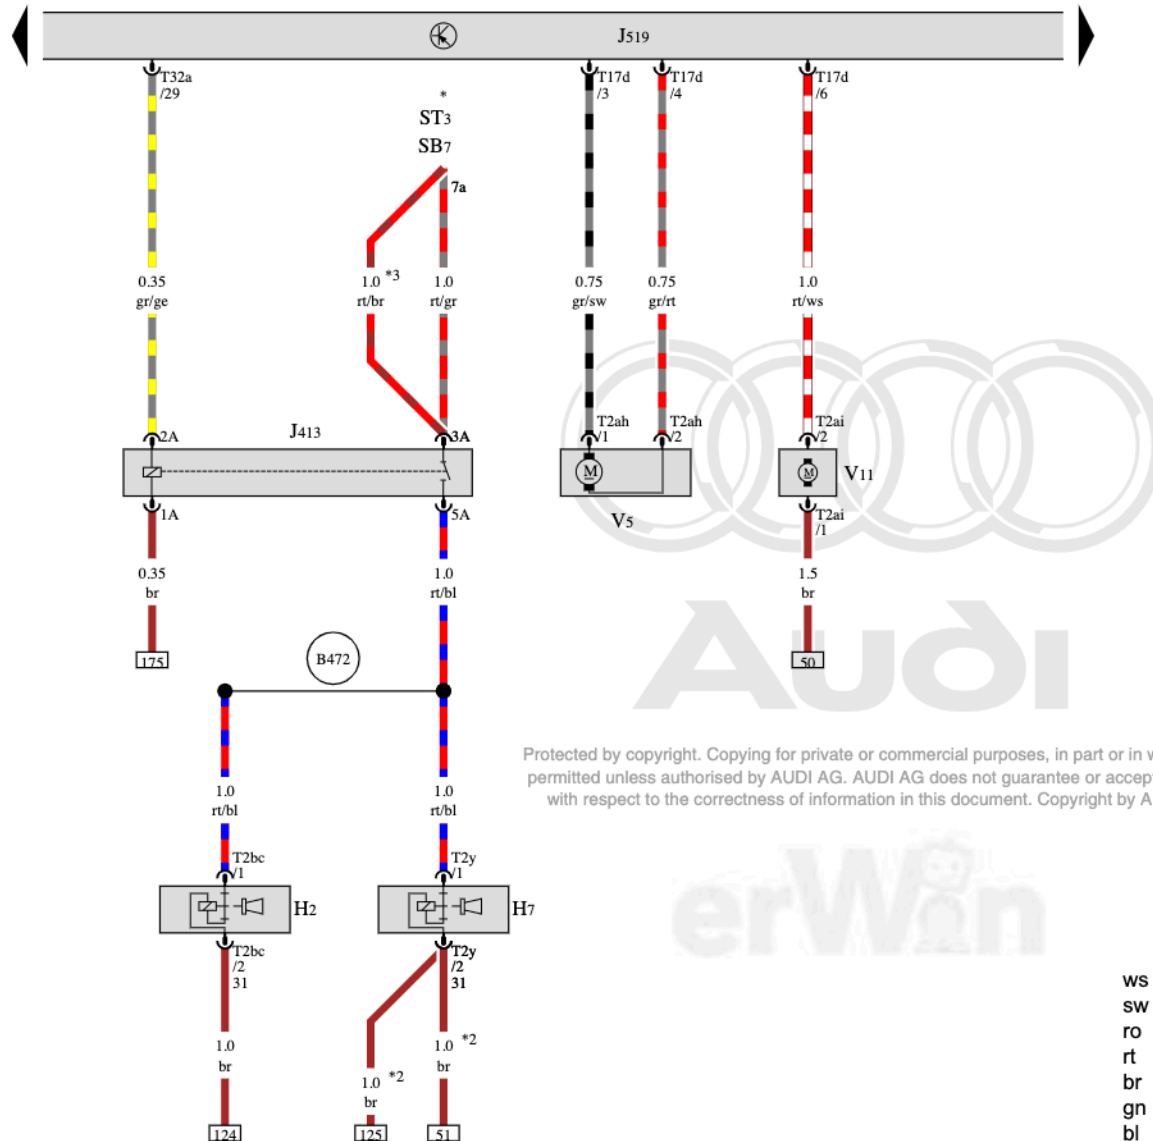

High Tone Horn, Low Tone Horn, Horn Relay, Vehicle Electrical System Control Module, Windshield Washer Pump, Headlamp Washer System Pump

- H2 High Tone Horn
- H7 Low Tone Horn
- J413 Horn Relay
- J519 Vehicle Electrical System Control Module
- ST3 Fuse Panel 3
- SB7 Fuse 7 (On Fuse Panel B)
- T2ah 2-Pin Connector
- T2ai 2-Pin Connector
- T2bc 2-Pin Connector
- T2y 2-Pin Connector
- T17d 17-Pin Connector
- T32a 32-Pin Connector
- V5 Windshield Washer Pump
- V11 Headlamp Washer System Pump

B472 Connection 8 (in Main Wiring Harness)

- * Refer to Applicable Wiring Diagram for Fuse Positions
- *2 Depending on Equipment
- *3 From June 2011

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Rain/Light Recognition Sensor, Wiper Motor Control Module, Vehicle Electrical System Control Module


- G397 Rain/Light Recognition Sensor
 J400 Wiper Motor Control Module
 J519 Vehicle Electrical System Control Module
 ST3 Fuse Panel 3
 SB8 Fuse 8 (On Fuse Panel B)
 SB9 Fuse 9 (On Fuse Panel B)
 T3o 3-Pin Connector
 T4t 4-Pin Connector
 T4u 4-Pin Connector, Near the Interior Rearview Mirror
 T16c 16-Pin Connector
 V Windshield Wiper Motor
- (B698) LIN Bus Connection 3 (in Main Wiring Harness)
 (Z5) Connection (in Window Defogger Wiring Harness)
- * Refer to Applicable Wiring Diagram for Fuse Positions
 *2 For RHD Vehicles
 *3 Depending on Equipment
 *4 From June 2011




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

erWin

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink

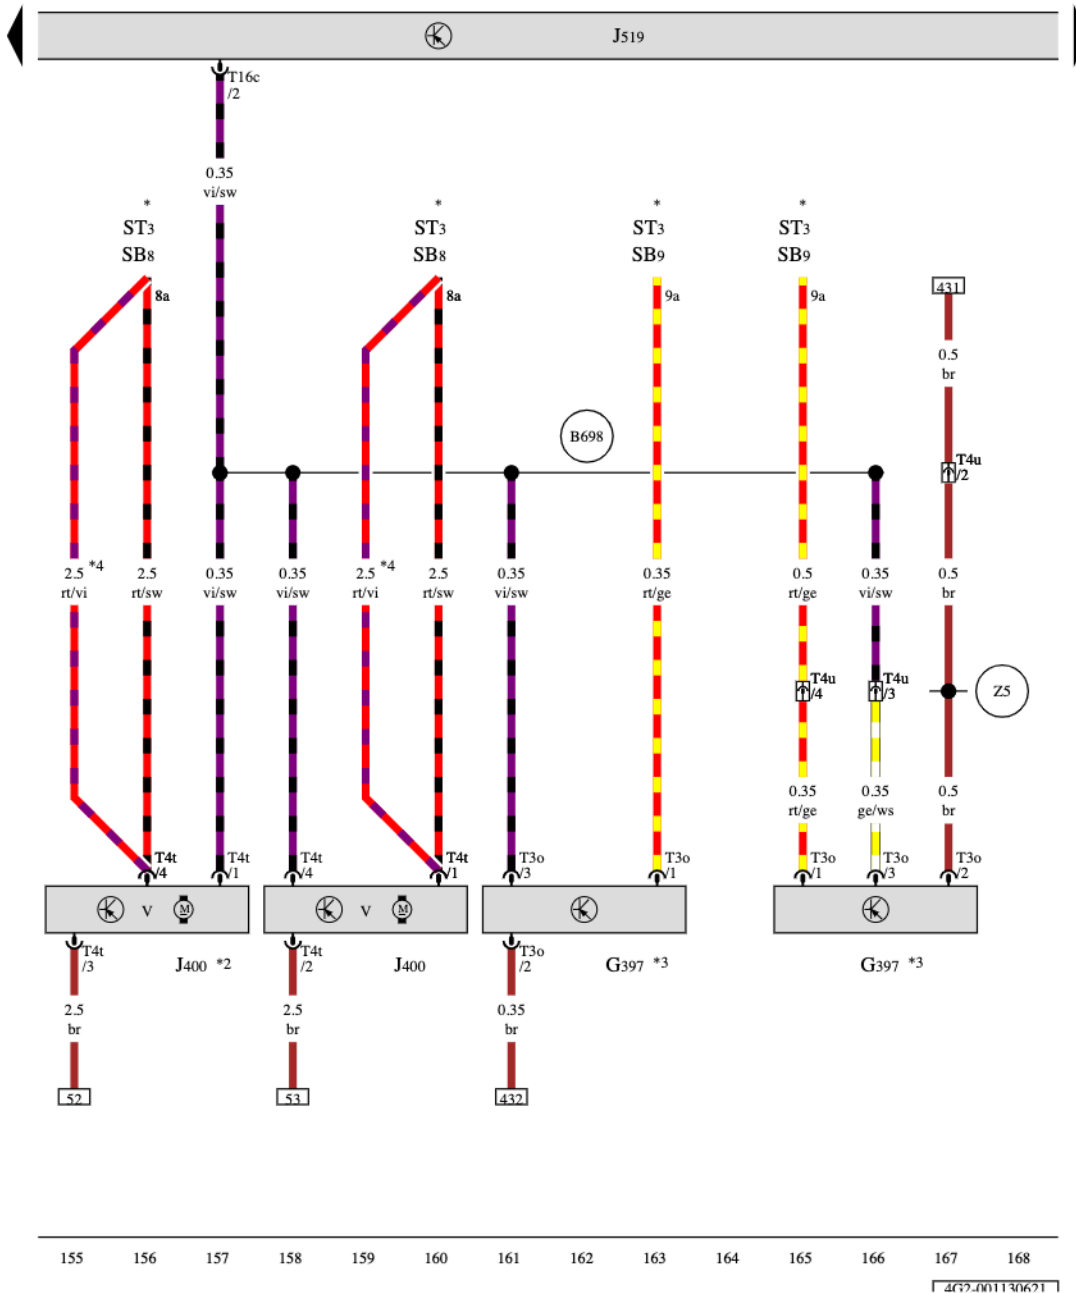

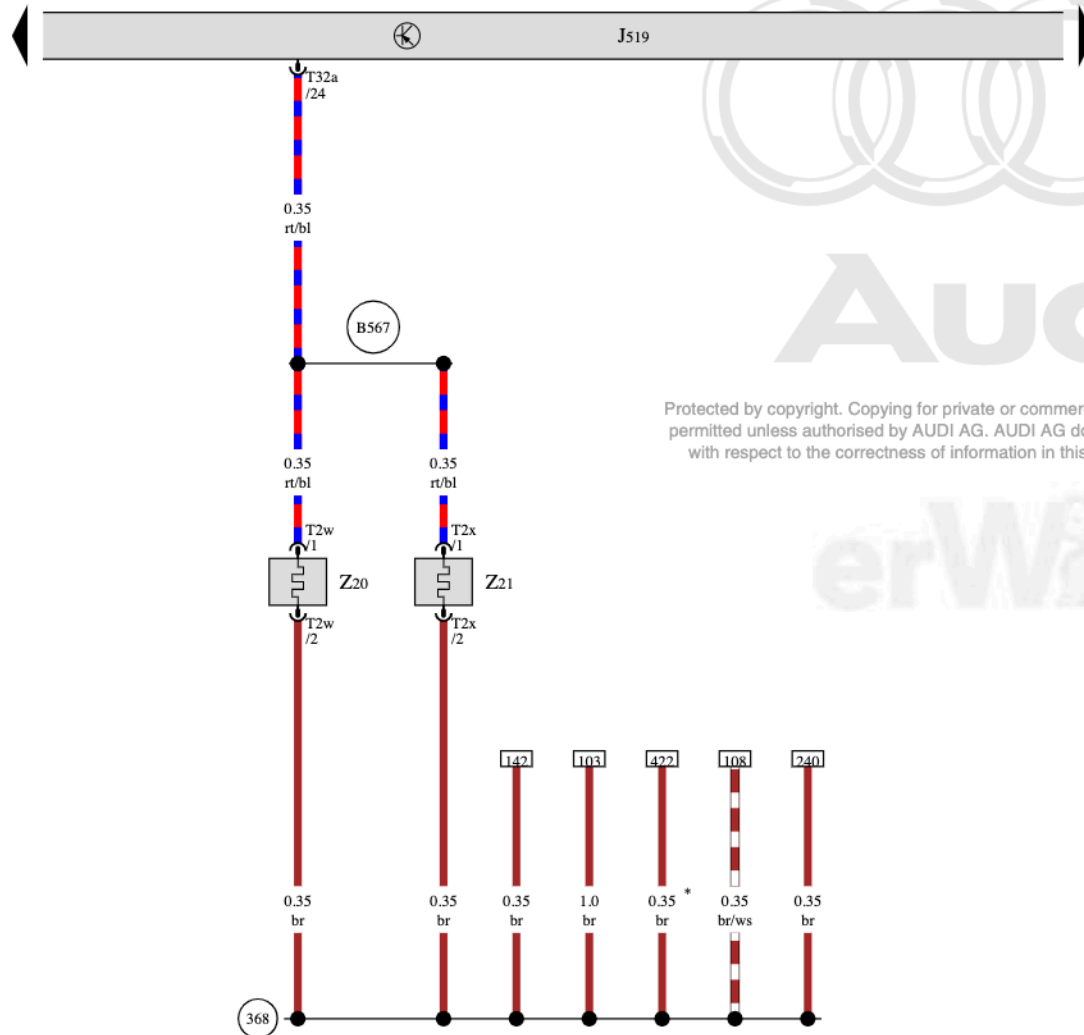

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Vehicle Electrical System Control Module, Left Washer Nozzle Heater

- J519 Vehicle Electrical System Control Module
- T2w 2-Pin Connector
- T2x 2-Pin Connector
- T32a 32-Pin Connector
- Z20 Left Washer Nozzle Heater
- Z21 Right Washer Nozzle Heater

368 Ground Connection 3 (in Main Wiring Harness)

B567 Connection 34 (in Main Wiring Harness)

* For Vehicles with Automatic Dimming Interior Rearview Mirror


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

169 170 171 172 173 174 175 176 177 178 179 180 181 182

142 103 422 108 240


F266	Engine Hood Contact Switch
F329	Hood Contact Switch 2
J519	Vehicle Electrical System Control Module
T2af	2-Pin Connector
T2ay	2-Pin Connector
T32a	32-Pin Connector

- 43 Ground Connection on A-Pillar, Lower Right
- 44 Ground Connection on A-Pillar, Lower Left
- 366 Ground Connection 1 (in Main Wiring Harness)
- 380 Ground Connection 15 (in Main Wiring Harness)
- B473 Connection 9 (in Main Wiring Harness)

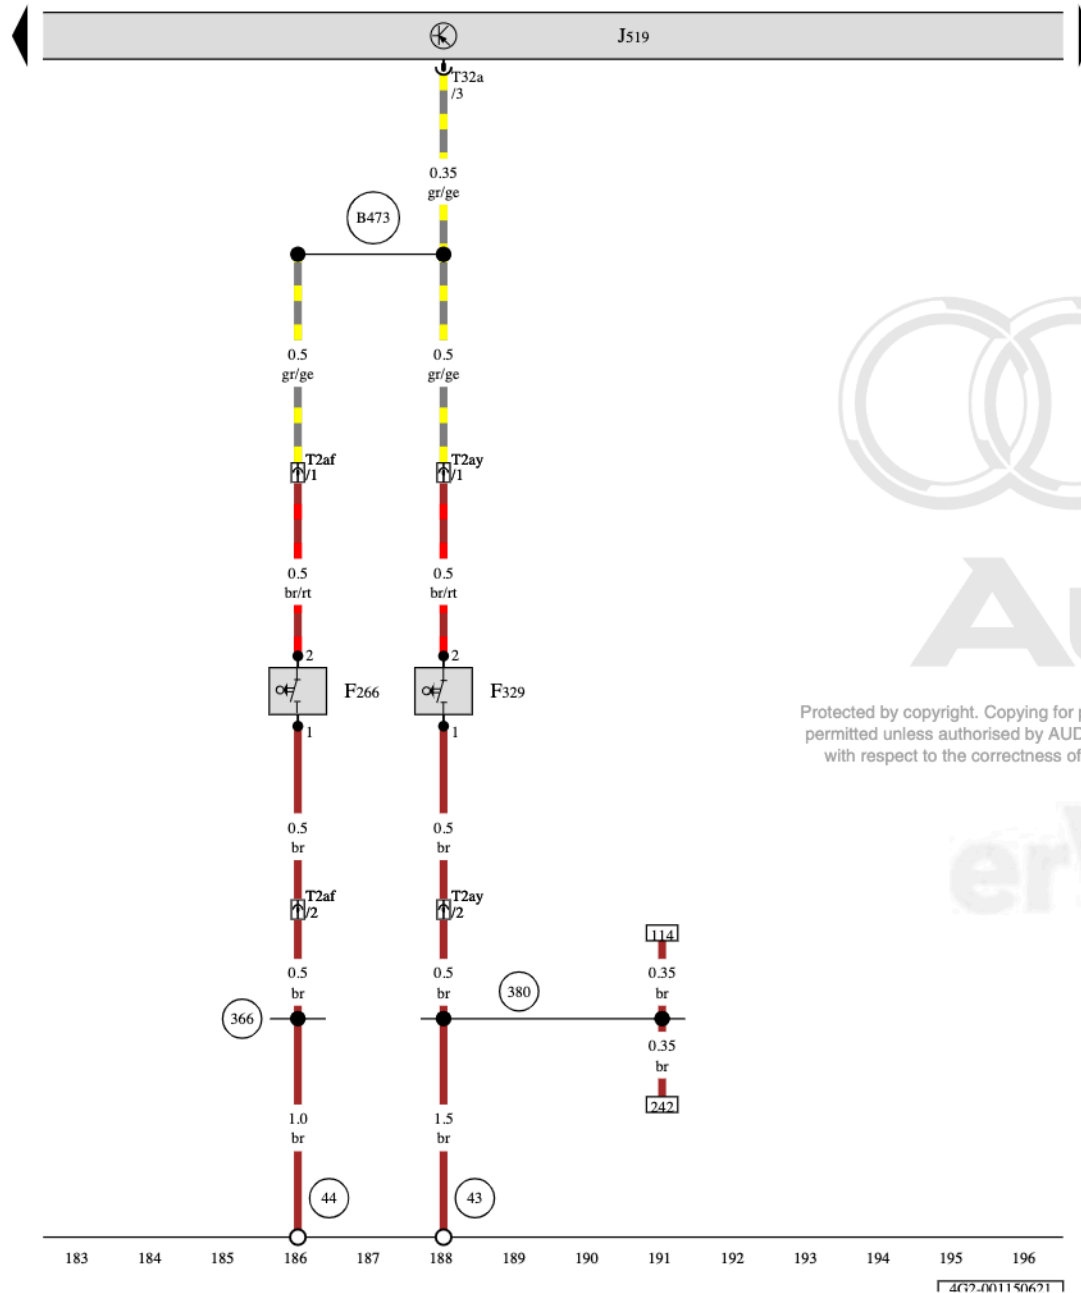

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

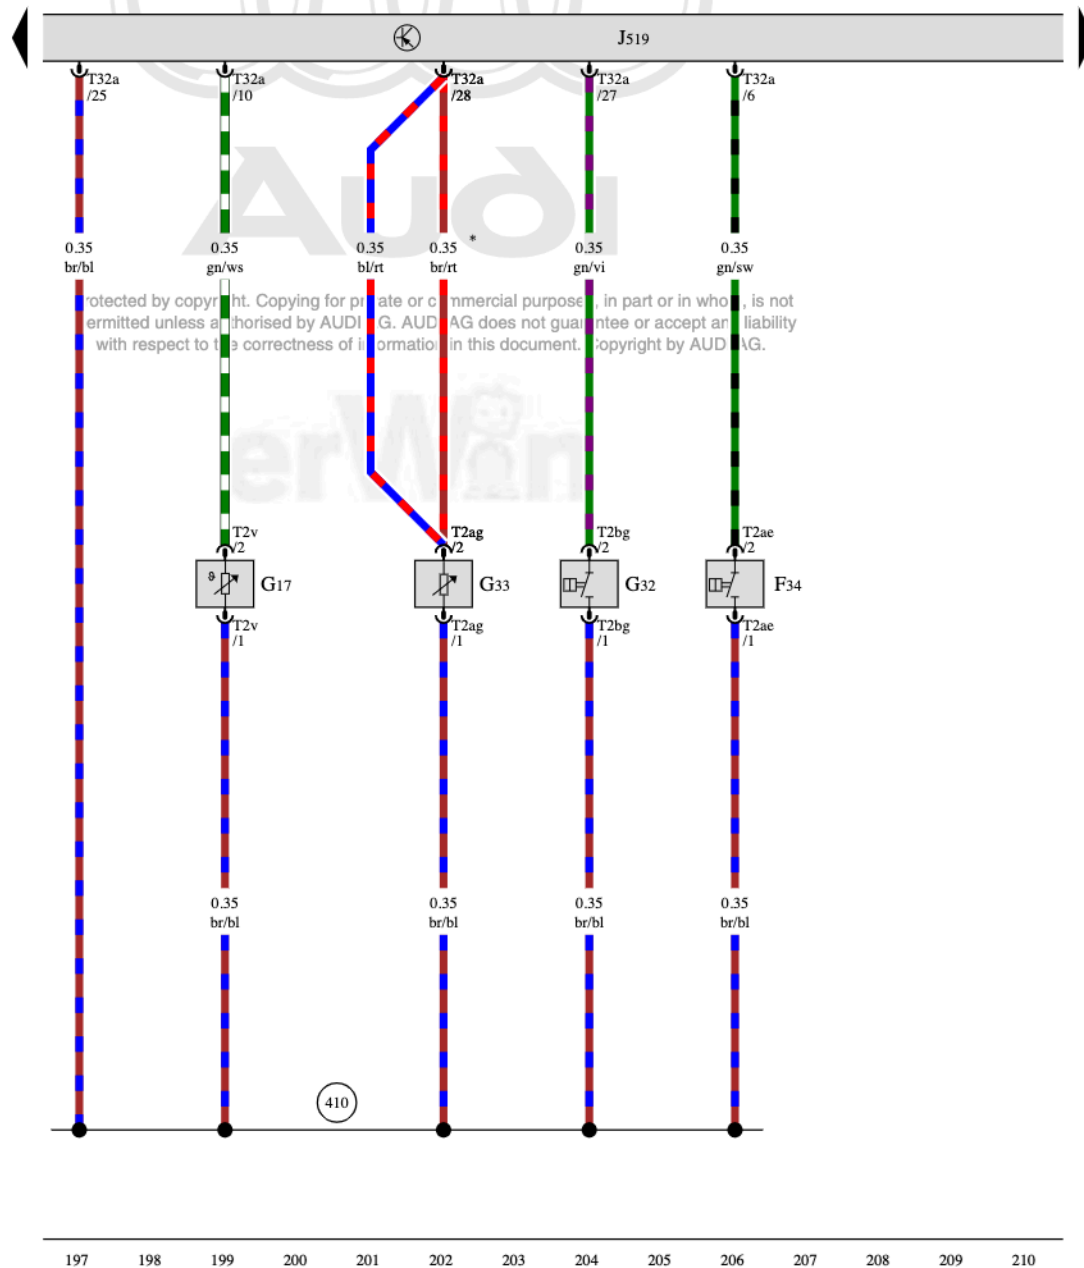


Brake Fluid Level Warning Switch, Outside Air Temperature Sensor, Engine Coolant Level Sensor, Windshield Washer Fluid Level Sensor, Vehicle Electrical System Control Module

- F34 Brake Fluid Level Warning Switch
- G17 Outside Air Temperature Sensor
- G32 Engine Coolant Level Sensor
- G33 Windshield Washer Fluid Level Sensor
- J519 Vehicle Electrical System Control Module
- T2ae 2-Pin Connector
- T2ag 2-Pin Connector
- T2bg 2-Pin Connector
- T2v 2-Pin Connector
- T32a 32-Pin Connector

410 Sensor Ground Connection 1 (in Main Wiring Harness)

* For Vehicles with a Headlamp Washer System

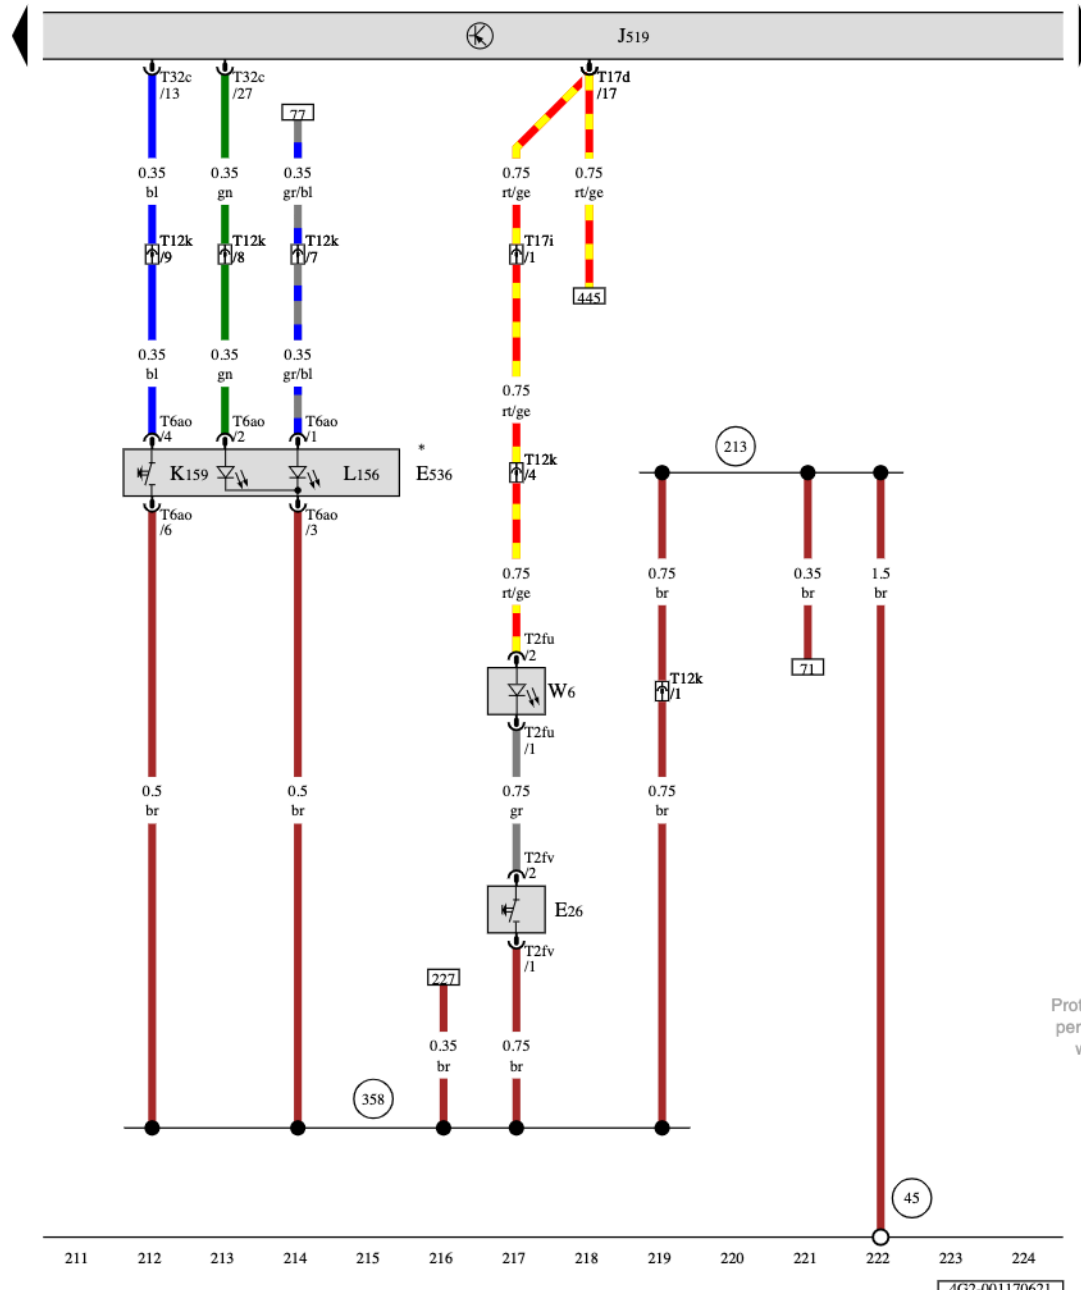

Glove Compartment Lamp Switch, Valet Parking Lock Button, Vehicle Electrical System Control Module, Glove Compartment Lamp


- E26 Glove Compartment Lamp Switch
- E536 Valet Parking Lock Button
- J519 Vehicle Electrical System Control Module
- K159 Valet Parking Indicator Lamp
- L156 Switch Illumination Bulb
- T2fu 2-Pin Connector
- T2fv 2-Pin Connector
- T6ao 6-Pin Connector
- T12k 12-Pin Connector, Behind the Glove Compartment
- T17d 17-Pin Connector
- T17i 17-Pin Connector, Near the A-Pillar
- T32c 32-Pin Connector
- W6 Glove Compartment Lamp

- 45 Ground Connection Behind Instrument Panel, Center
- 213 Ground Connection (in Instrument Panel Wiring Harness)
- 358 Ground Connection (in Glove Compartment Wiring Harness)

* For USA Only

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

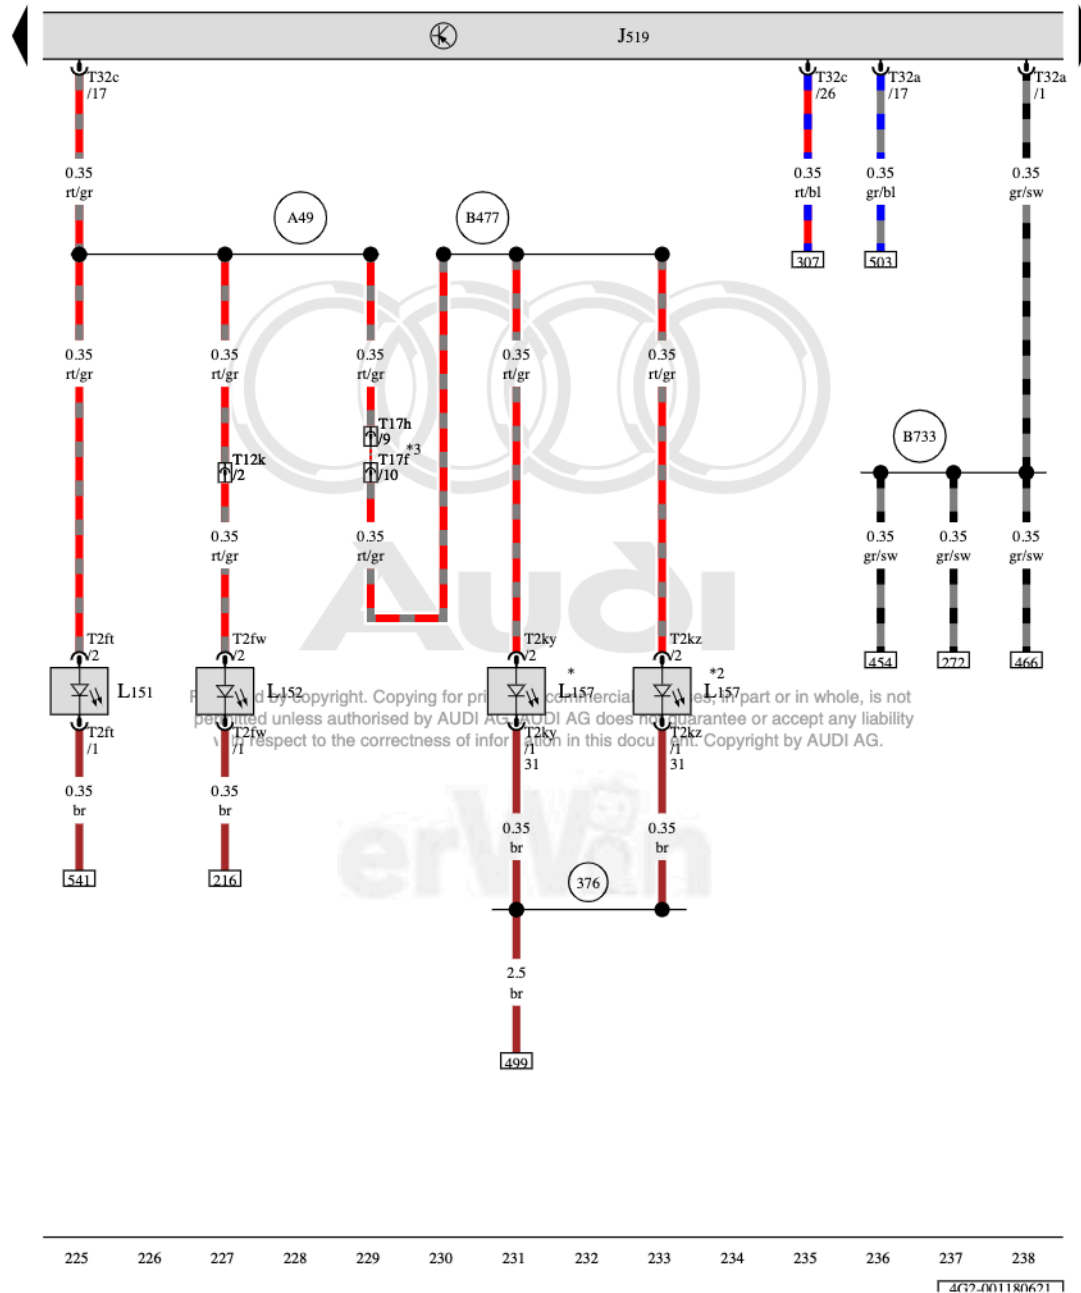


Vehicle Electrical System Control Module, Left Front Footwell Illumination Bulb, Right Front Footwell Illumination Bulb, Center Armrest Illumination Bulb

- J519 Vehicle Electrical System Control Module
- L151 Left Front Footwell Illumination Bulb
- L152 Right Front Footwell Illumination Bulb
- L157 Center Armrest Illumination Bulb
- T2ft 2-Pin Connector
- T2fw 2-Pin Connector
- T2ky 2-Pin Connector
- T2kz 2-Pin Connector
- T12k 12-Pin Connector, Behind the Glove Compartment
- T17h 17-Pin Connector, Near the A-Pillar
- T17f 17-Pin Connector, Near the A-Pillar
- T32a 32-Pin Connector
- T32c 32-Pin Connector

- 376 Ground Connection 11 (in Main Wiring Harness)
- A49 Connection 1 (in Instrument Panel Wiring Harness)
- B477 Connection 13 (in Main Wiring Harness)
- B733 Connection 58s (in Main Wiring Harness) 3

- * Left
- *2 Right
- *3 Depending on Equipment

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

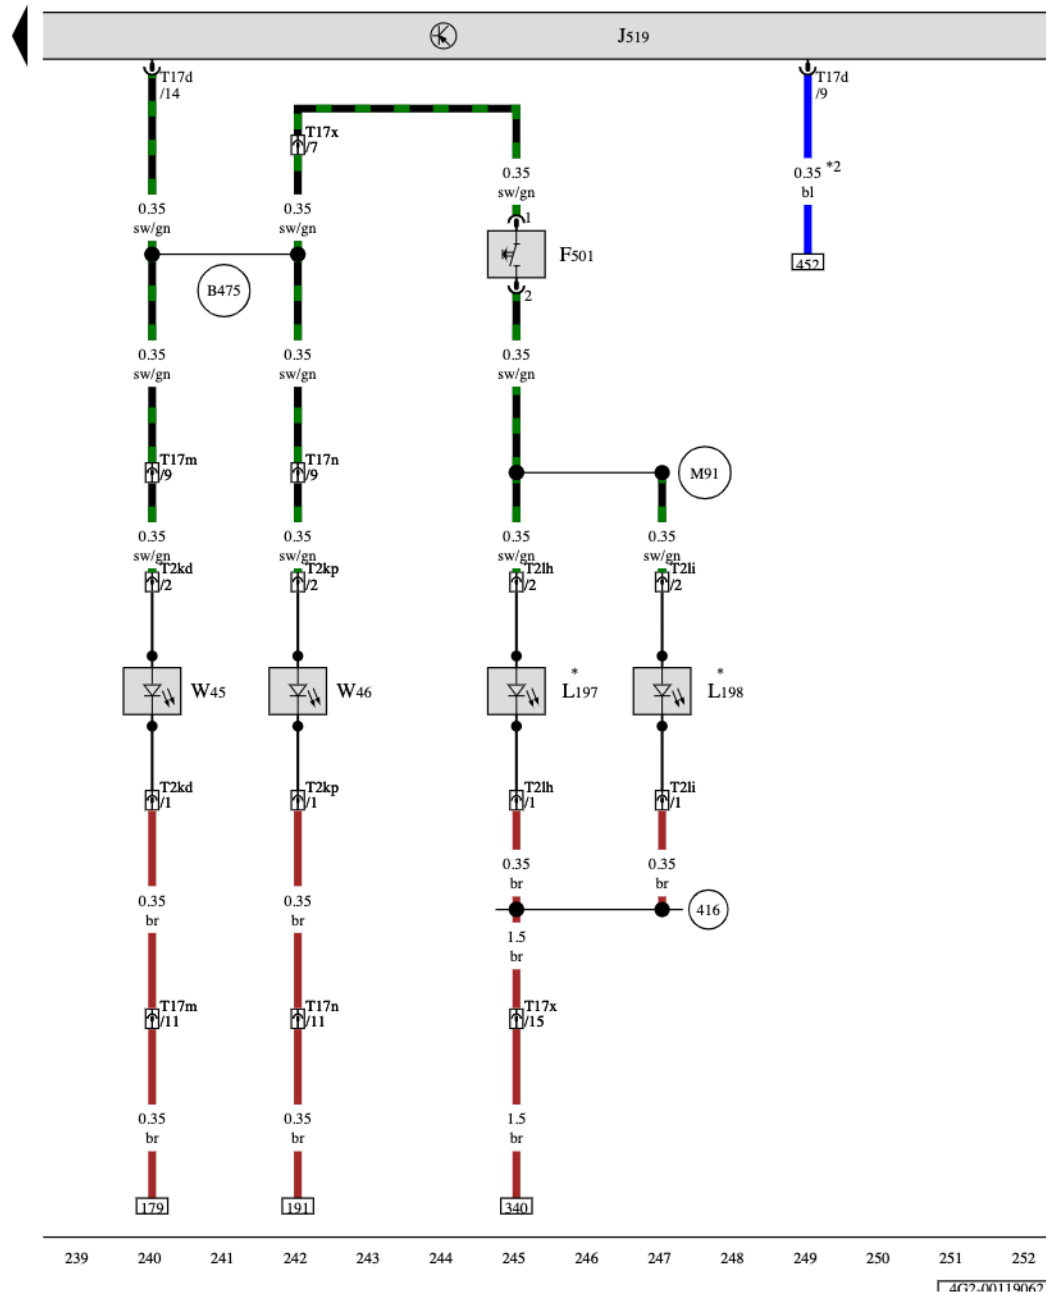

Rear Center Console Ambient Lighting Contact Switch, Vehicle Electrical System Control Module, Rear Center Console Ambient Lighting Bulb 1, Rear Center Console Ambient Lighting Bulb 2, Left Rear Footwell Lamp, Right Rear Footwell Lamp


- F501 Rear Center Console Ambient Lighting Contact Switch
- J519 Vehicle Electrical System Control Module
- L197 Rear Center Console Ambient Lighting Bulb 1
- L198 Rear Center Console Ambient Lighting Bulb 2
- T2kd 2-Pin Connector
- T2kp 2-Pin Connector
- T2lh 2-Pin Connector
- T2li 2-Pin Connector
- T17d 17-Pin Connector
- T17m 17-Pin Connector, In the Coupling Point for the Left Front Seat
- T17n 17-Pin Connector, In the Coupling Point for the Right Front Seat

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- T17x 17-Pin Connector, In the Coupling Point for the Rear Center Armrest
- W45 Left Rear Footwell Lamp
- W46 Right Rear Footwell Lamp
- 416 Ground Connection (in Rear Armrest Wiring Harness)
- B475 Connection 11 (in Main Wiring Harness)
- M91 Connection 58d (in Rear Armrest Wiring Harness)

- * For Vehicles with Auxiliary Lamps
- *2 The Color of the Wires Depends on Vehicle Equipment

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

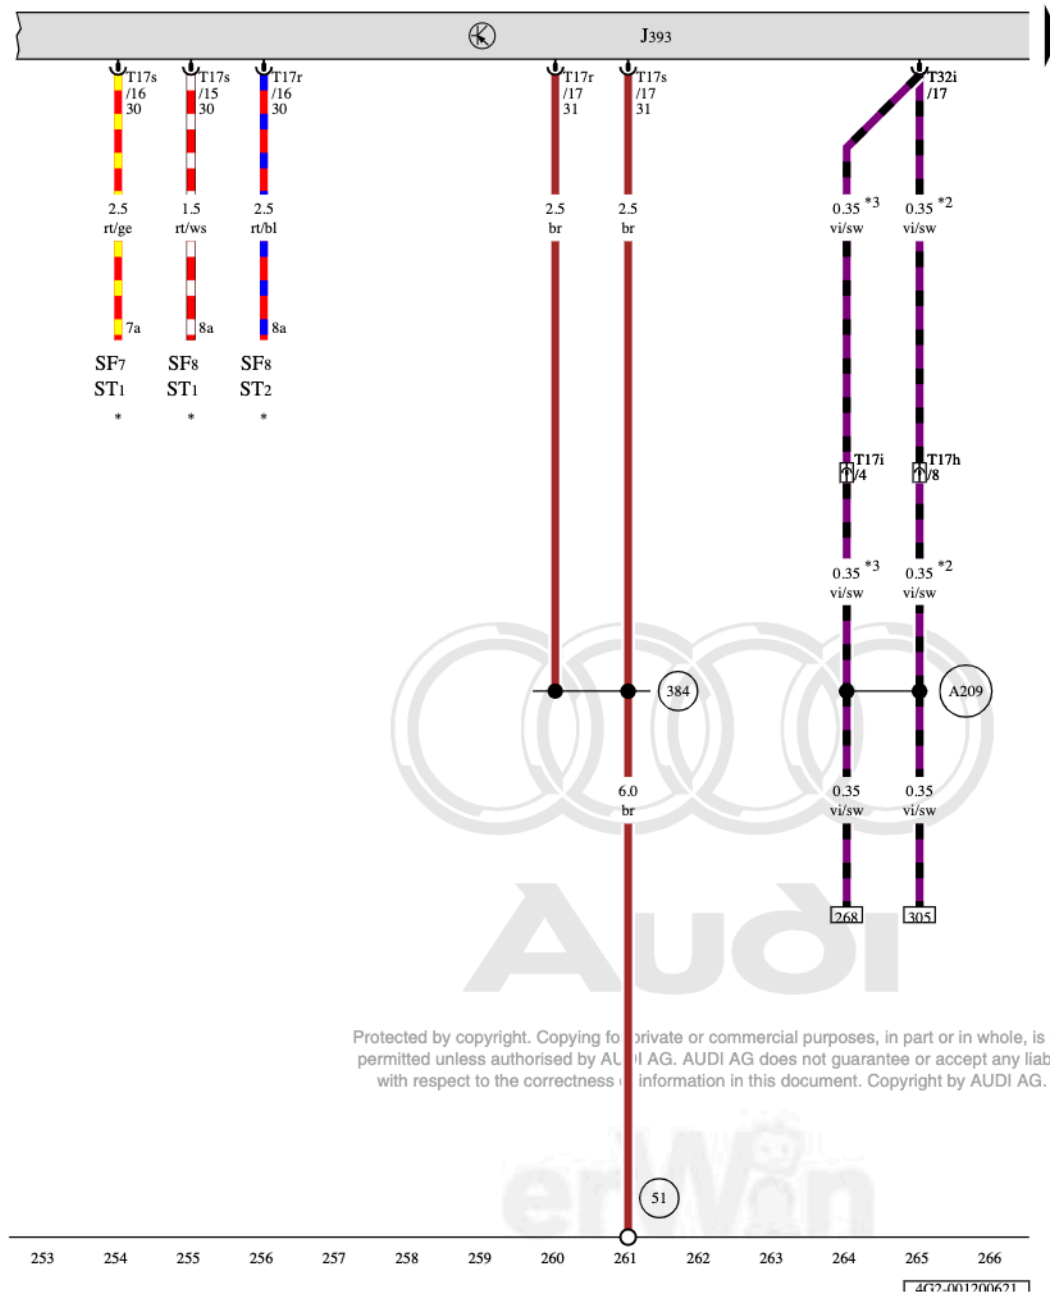


Comfort System Central Control Module

J393 Comfort System Central Control Module
 ST1 Fuse Panel 1
 ST2 Fuse Panel 2
 SF7 Fuse 7 (On Fuse Panel F)
 SF8 Fuse 8 (On Fuse Panel F)
 T17h 17-Pin Connector, Near the A-Pillar
 T17i 17-Pin Connector, Near the A-Pillar
 T17r 17-Pin Connector
 T17s 17-Pin Connector
 T32i 32-Pin Connector

- 51 Ground Connection in Luggage Compartment, Right
- 384 Ground Connection 19 (in Main Wiring Harness)
- A209 LIN Bus Connection 1 (in Instrument Panel Wiring Harness)
- * Refer to Applicable Wiring Diagram for Fuse Positions
- *2 For LHD Vehicles
- *3 For RHD Vehicles

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink

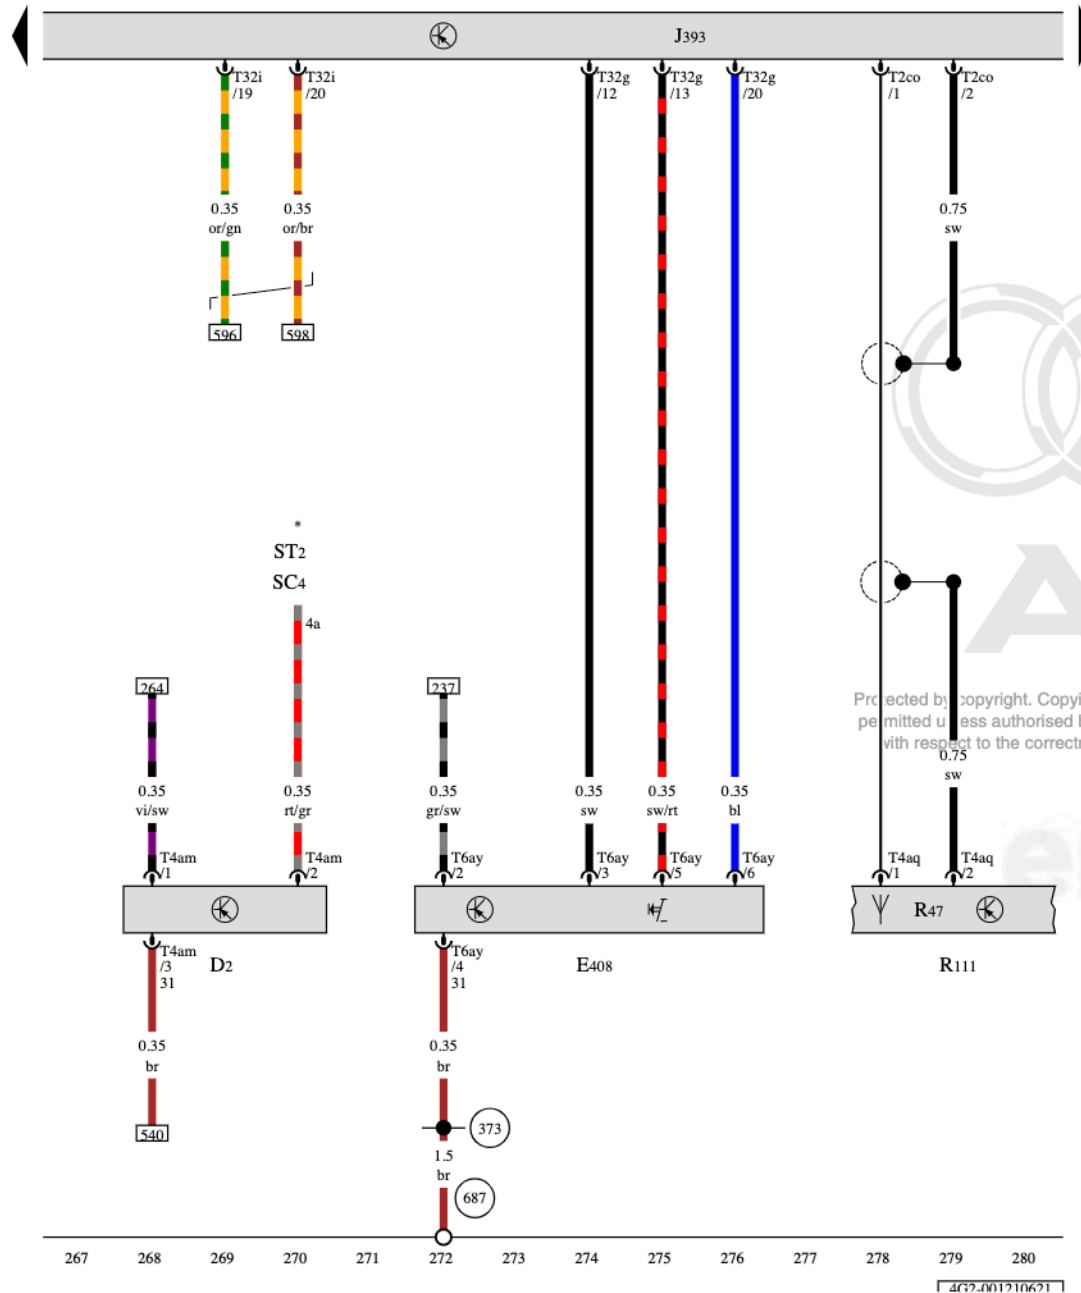

Anti-Theft Immobilizer Reader Coil, Access/Start Authorization Button, Comfort System Central Control Module, Central Locking and Anti-Theft Alarm System Antenna

- | | |
|------|---|
| D2 | Anti-Theft Immobilizer Reader Coil |
| E408 | Access/Start Authorization Button |
| J393 | Comfort System Central Control Module |
| R47 | Central Locking and Anti-Theft Alarm System Antenna |
| R111 | Antenna Amplifier 2 |
| ST2 | Fuse Panel 2 |
| SC4 | Fuse 4 (On Fuse Panel C) |
| T2co | 2-Pin Connector |
| T4am | 4-Pin Connector |
| T4aq | 4-Pin Connector |
| T6ay | 6-Pin Connector |
| T32g | 32-Pin Connector |
| T32i | 32-Pin Connector |

(373) Ground Connection 8 (in Main Wiring Harness)


687 Ground Connection 1 on Center Tunnel

* Refer to Applicable Wiring Diagram for Fuse Positions

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

Comfort System Central Control Module, Access/Start System Antenna 1 in Vehicle Interior

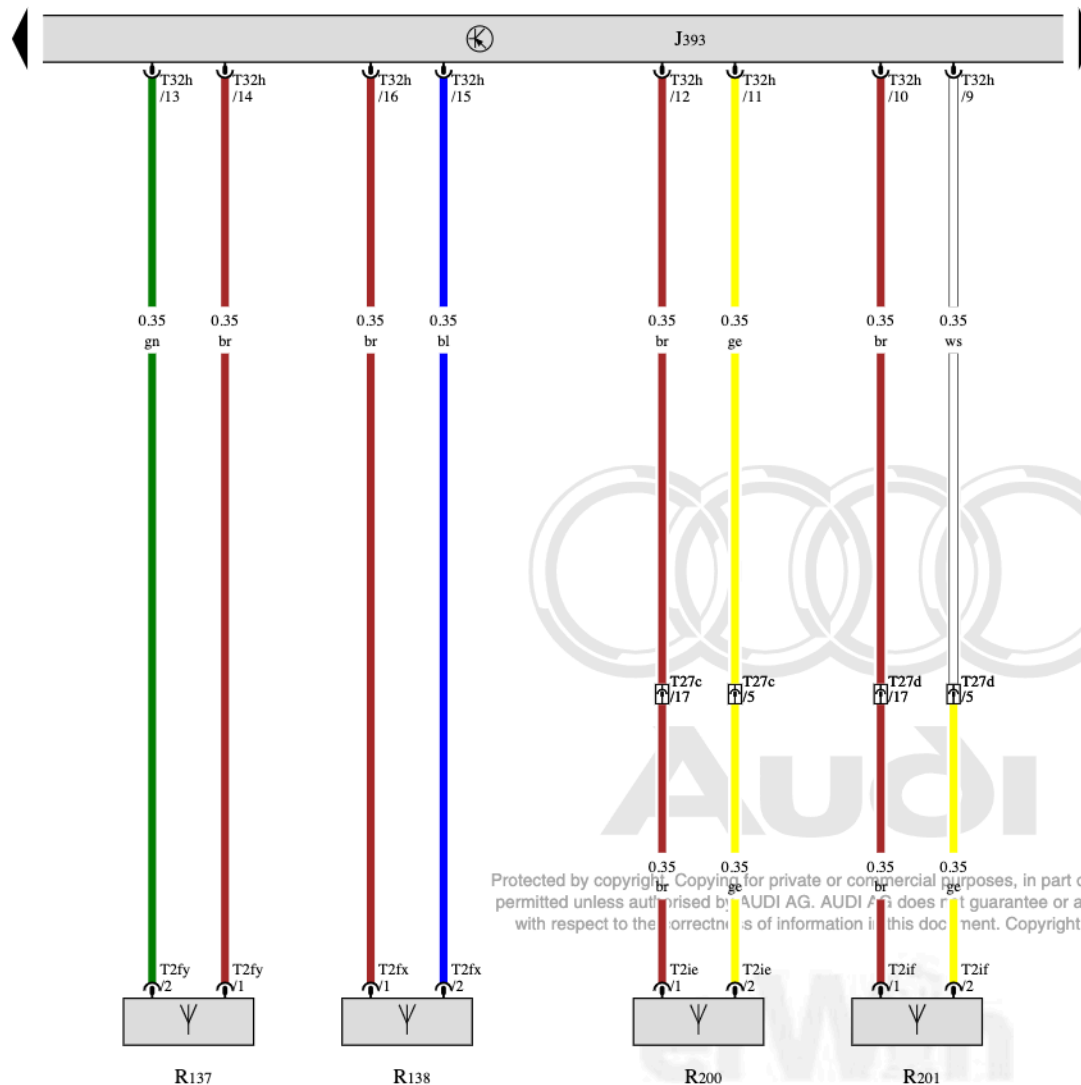


- J393 Comfort System Central Control Module
- R137 Access/Start System Antenna in Luggage Compartment
- R138 Access/Start System Antenna 1 in Vehicle Interior
- R200 Left Access/Start Authorization Antenna
- R201 Right Access/Start Authorization Antenna
- T2fx 2-Pin Connector
- T2fy 2-Pin Connector
- T2ie 2-Pin Connector
- T2if 2-Pin Connector
- T27c 27-Pin Connector, On the Left B-Pillar
- T27d 27-Pin Connector, On the Right B-Pillar
- T32h 32-Pin Connector

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Comfort System Central Control Module, Electronic
Steering Column Lock Control Module

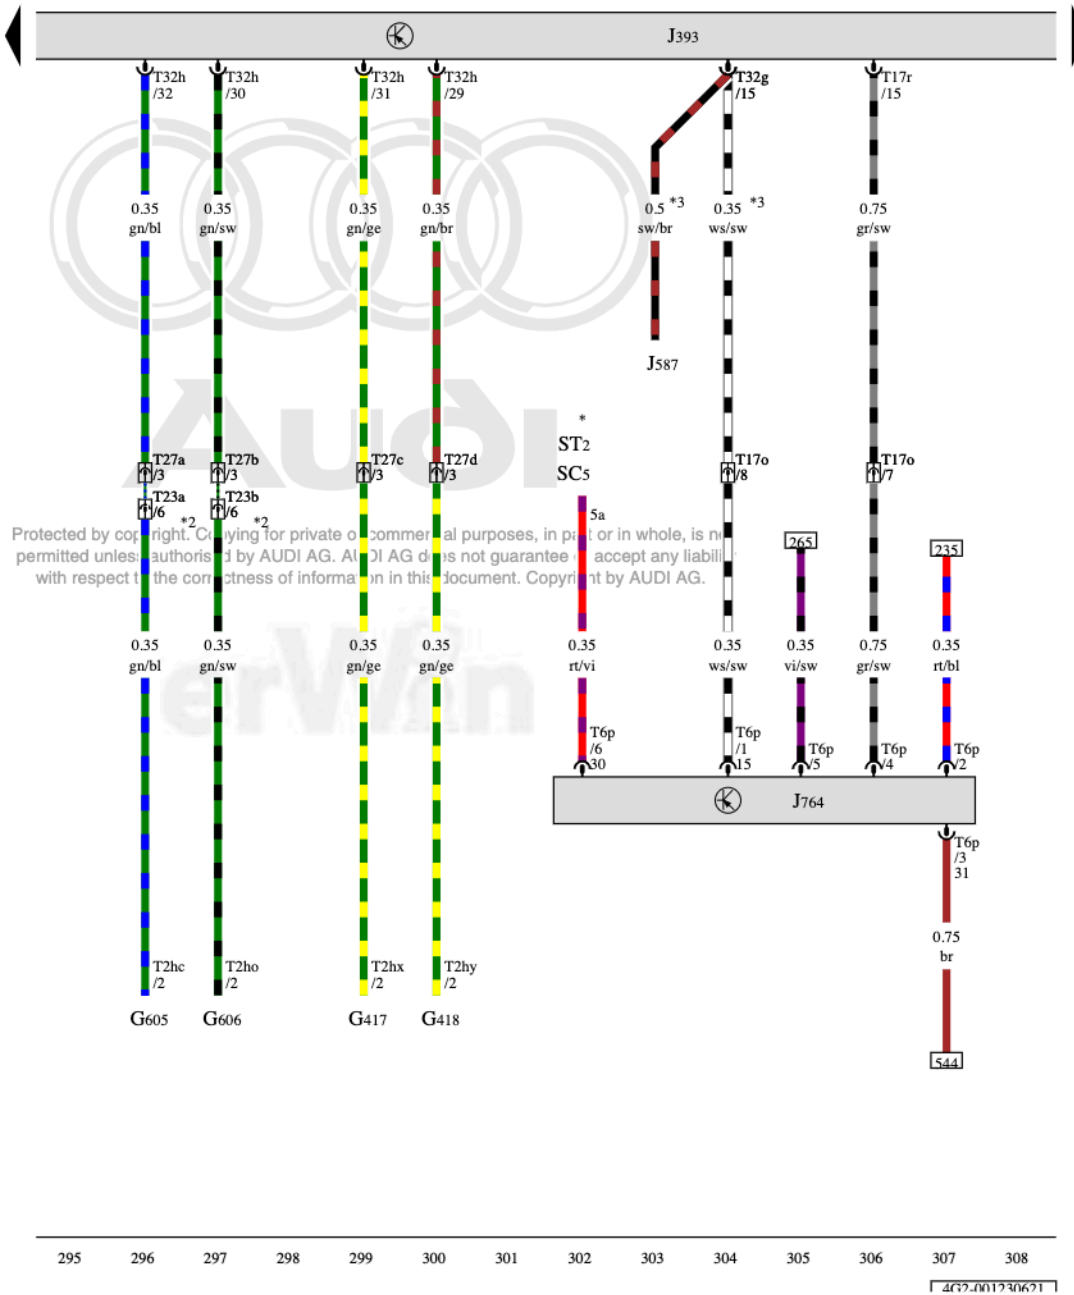

- G417 Left Rear Exterior Door Handle Touch Sensor
- G418 Right Rear Exterior Door Handle Touch Sensor
- G605 Left Front Exterior Door Handle Touch Sensor
- G606 Right Front Exterior Door Handle Touch Sensor
- J393 Comfort System Central Control Module
- J587 Selector Lever Sensor System Control Module
- J764 Electronic Steering Column Lock Control Module
- ST2 Fuse Panel 2
- SC5 Fuse 5 (On Fuse Panel C)
- T2hc 2-Pin Connector
- T2ho 2-Pin Connector
- T2hx 2-Pin Connector
- T2hy 2-Pin Connector
- T6p 6-Pin Connector
- T17o 17-Pin Connector, Near the A-Pillar
- T17r 17-Pin Connector
- T23a 23-Pin Connector, On the Left A-Pillar
- T23b 23-Pin Connector, On the Right A-Pillar
- T27a 27-Pin Connector, On the Left A-Pillar
- T27b 27-Pin Connector, On the Right A-Pillar
- T27c 27-Pin Connector, On the Left B-Pillar
- T27d 27-Pin Connector, On the Right B-Pillar
- T32g 32-Pin Connector
- T32h 32-Pin Connector
- * Refer to Applicable Wiring Diagram for Fuse Positions
- *2 From June 2011
- *3 Depending on Equipment

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

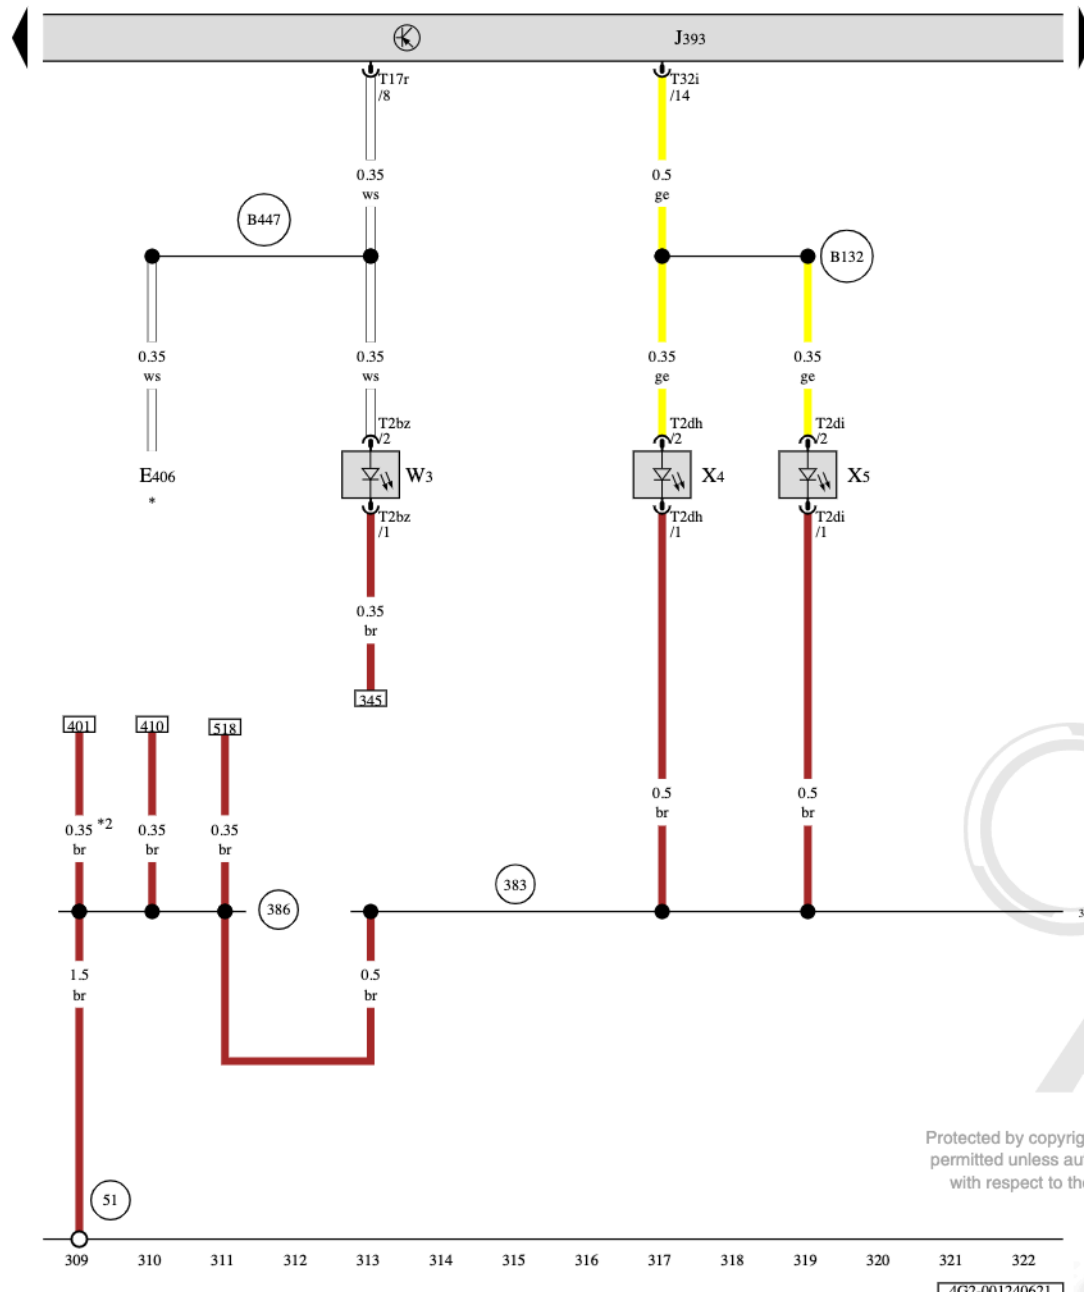


Comfort System Central Control Module, Luggage Compartment Lamp, Left License Plate Lamp

- E406 Rear Lid Lock Button in Luggage Compartment
- J393 Comfort System Central Control Module
- T2bz 2-Pin Connector
- T2dh 2-Pin Connector
- T2di 2-Pin Connector
- T17r 17-Pin Connector
- T32i 32-Pin Connector
- W3 Luggage Compartment Lamp
- X4 Left License Plate Lamp
- X5 Right License Plate Lamp
- 51 Ground Connection in Luggage Compartment, Right
- 383 Ground Connection 18 (in Main Wiring Harness)
- 386 Ground Connection 21 (in Main Wiring Harness)
- B132 License Plate Lamp Connection (in Interior Wiring Harness)
- B447 Luggage Compartment Lamp Connection (in Main Wiring Harness)
- * Refer to Applicable Convenience System Wiring Diagram
- *2 Avant

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorized by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

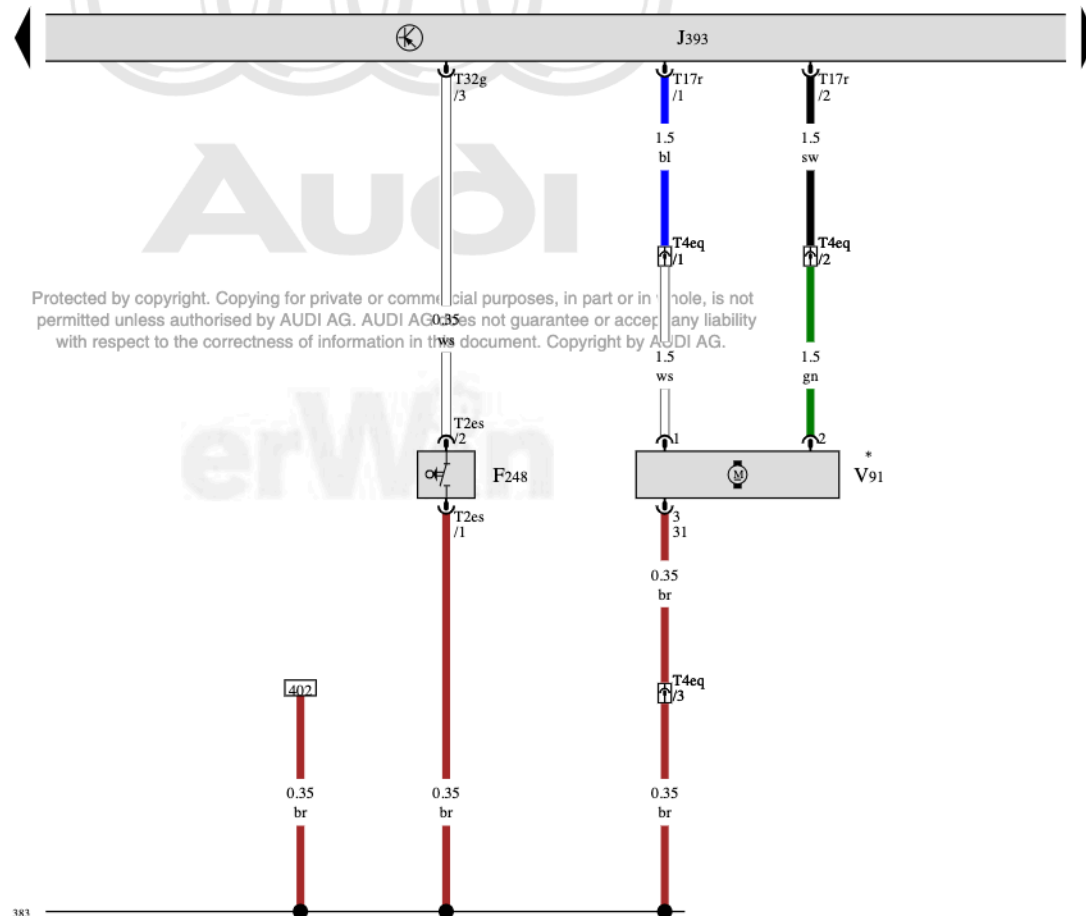

Rear Lid Lock Cylinder Unlock Button, Comfort System Central Control Module, Rear Window Shade Motor


- F248 Rear Lid Lock Cylinder Unlock Button
- J393 Comfort System Central Control Module
- T2es 2-Pin Connector
- T4eq 4-Pin Connector
- T17r 17-Pin Connector
- T32g 32-Pin Connector
- V91 Rear Window Shade Motor

- 383 Ground Connection 18 (in Main Wiring Harness)
- * For Vehicles with Power Rear Window Shade

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

323 324 325 326 327 328 329 330 331 332 333 334 335 336


Comfort System Central Control Module, Left Brake Lamp Bulb, Left Back-Up Lamp Bulb, Left Brake/Tail Lamp Bulb

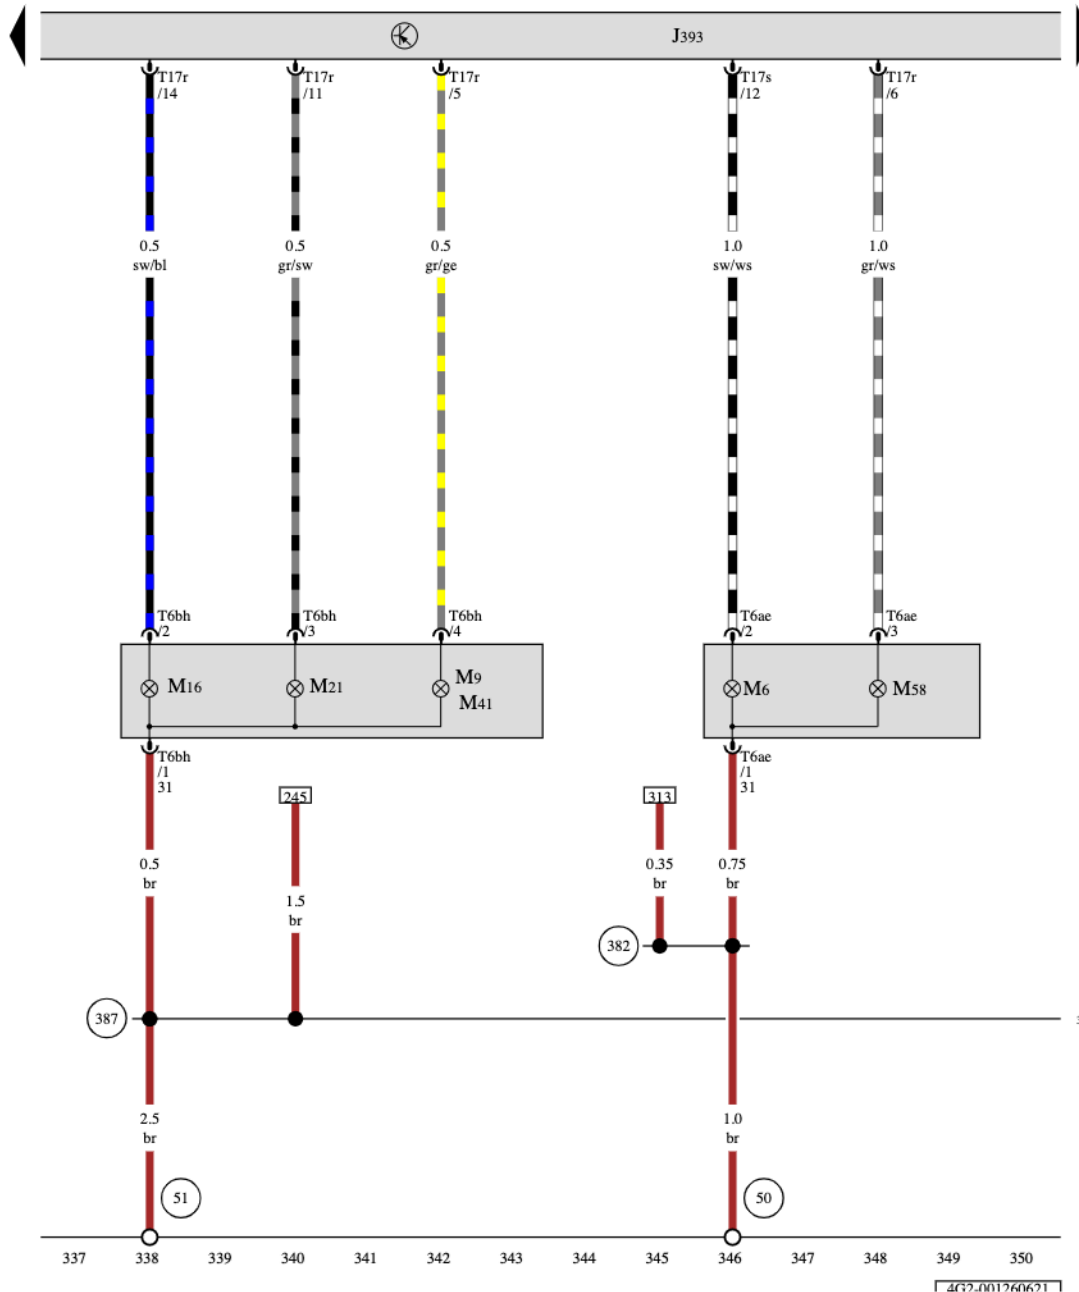

- J393 Comfort System Central Control Module
- M6 Left Rear Turn Signal Bulb
- M9 Left Brake Lamp Bulb
- M16 Left Back-Up Lamp Bulb
- M21 Left Brake/Tail Lamp Bulb
- M41 Left Rear Parking/Fog Lamp Bulb
- M58 Left Brake/Tail Lamp Bulb 2
- T6ae 6-Pin Connector
- T6bh 6-Pin Connector
- T17r 17-Pin Connector
- T17s 17-Pin Connector

- 50 Ground Connection in Luggage Compartment, Left
- 51 Ground Connection in Luggage Compartment, Right
- 382 Ground Connection 17 (in Main Wiring Harness)
- 387 Ground Connection 22 (in Main Wiring Harness)

Protected by copyright. Copying for private or commercial purposes in part or in whole is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

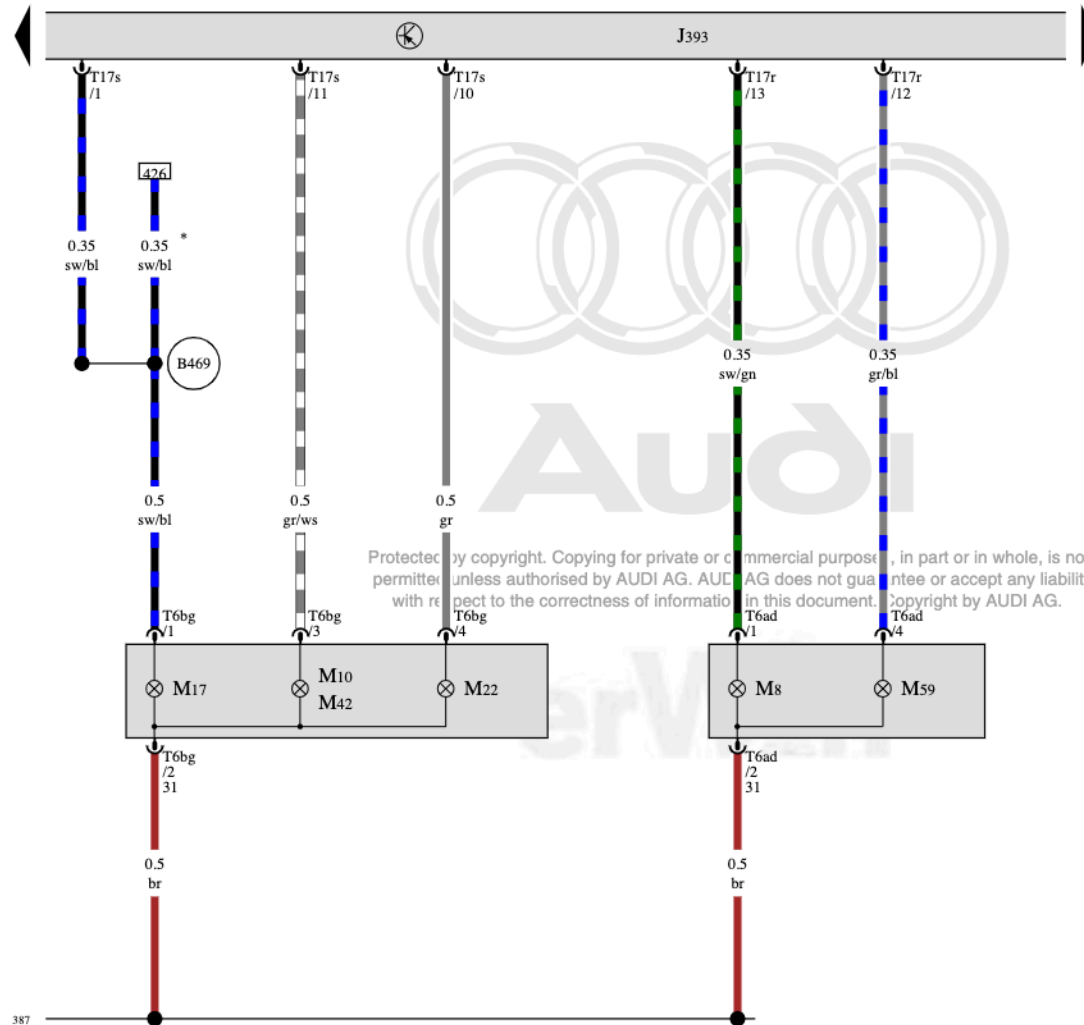

Comfort System Central Control Module, Right Brake Lamp Bulb, Right Back-Up Lamp Bulb, Right Brake/Tail Lamp Bulb, Right Rear Parking/Fog Lamp Bulb

- J393 Comfort System Central Control Module
- M8 Right Rear Turn Signal Bulb
- M10 Right Brake Lamp Bulb
- M17 Right Back-Up Lamp Bulb
- M22 Right Brake/Tail Lamp Bulb
- M42 Right Rear Parking/Fog Lamp Bulb
- M59 Right Brake/Tail Lamp Bulb 2
- T6ad 6-Pin Connector
- T6bg 6-Pin Connector
- T17r 17-Pin Connector
- T17s 17-Pin Connector

387 Ground Connection 22 (in Main Wiring Harness)


B469 Connection 5 (in Main Wiring Harness)

* For Vehicles Without High Beam Assist

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

351 352 353 354 355 356 357 358 359 360 361 362 363 364

4632001270621

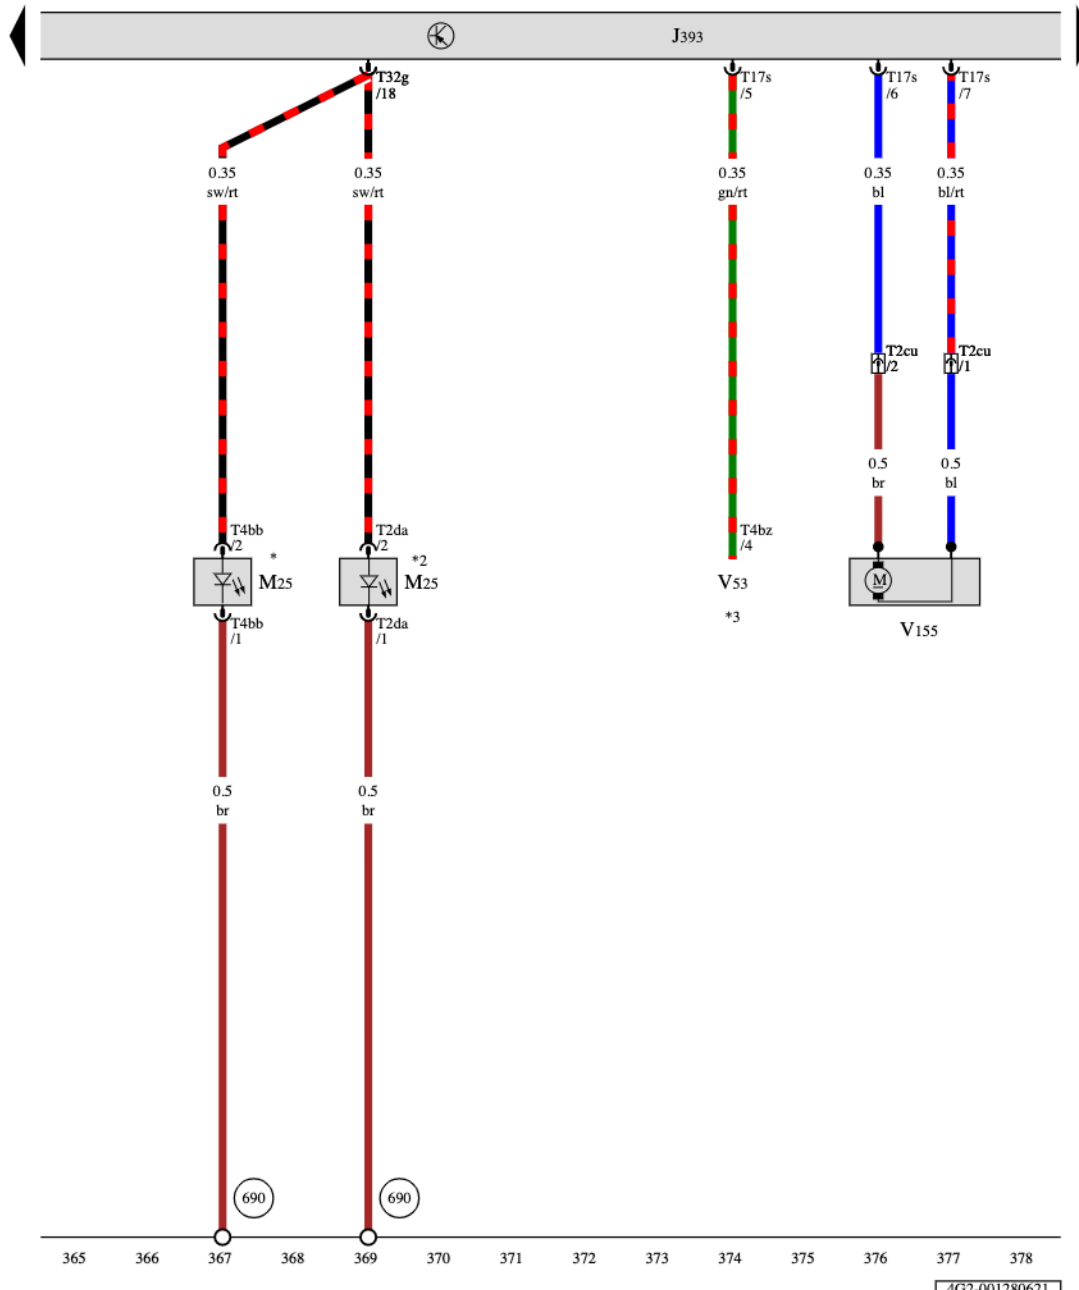

Comfort System Central Control Module, High-Mounted Brake Lamp Bulb, Fuel Filler Door Lock Motor

- J393 Comfort System Central Control Module
- M25 High-Mounted Brake Lamp Bulb
- T2cu 2-Pin Connector
- T2da 2-Pin Connector
- T4bb 4-Pin Connector
- T4bz 4-Pin Connector
- T17s 17-Pin Connector
- T32g 32-Pin Connector
- V53 Rear Lid Central Locking System Motor
- V155 Fuel Filler Door Lock Motor

690 Ground Connection on Roof Frame, Center Rear

- * For Vehicles with Insulating Windshield
- *2 For Vehicles with Heat-Insulating Windshield
- *3 Refer to Applicable Convenience System Wiring Diagram

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



Audi


erWan

Brake Lamp Switch, Comfort System Central Control Module

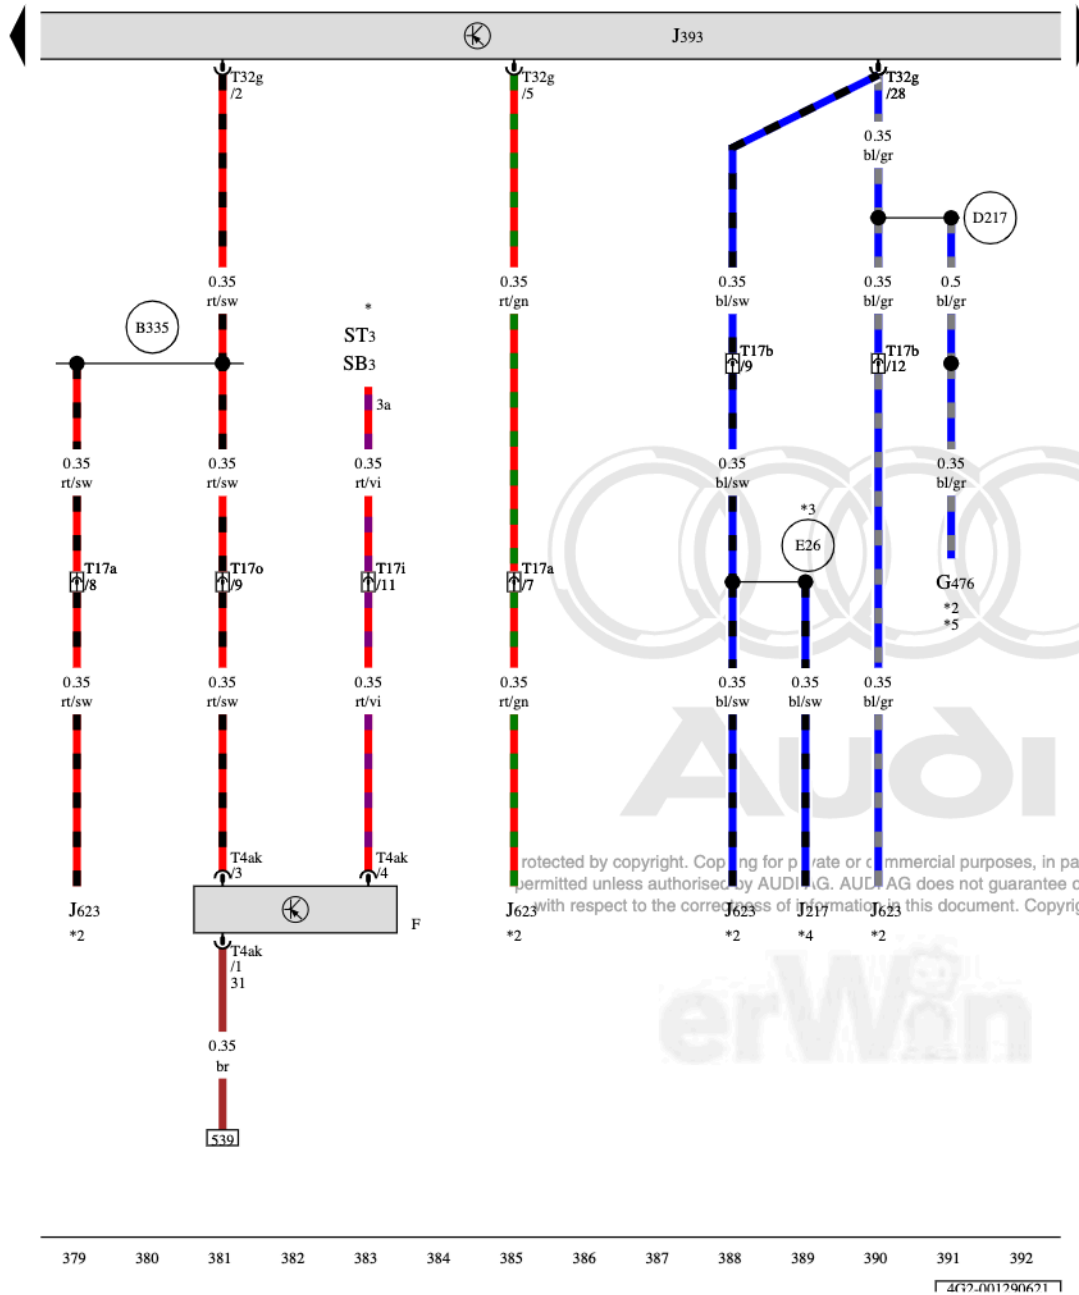

- F Brake Lamp Switch
- G476 Clutch Position Sensor
- J217 Transmission Control Module
- J393 Comfort System Central Control Module
- J623 Engine/Motor Control Module
- SB3 Fuse 3 (On Fuse Panel B)
- ST3 Fuse Panel 3
- T4ak 4-Pin Connector
- T17a 17-Pin Connector, Left Plenum Chamber E-Box Connector Station
- T17b 17-Pin Connector, Left Plenum Chamber E-Box Connector Station
- T17i 17-Pin Connector, Near the A-Pillar
- T17o 17-Pin Connector, Near the A-Pillar
- T32g 32-Pin Connector
- B335 Connection 54 (in Main Wiring Harness) 1
- D217 Selector Lever P/N Position Connection (in Main Wiring Harness)
- E26 Selector Lever P/N Position Connection (in Motronic Multiform Fuel Injection Wiring Harness)
- * Refer to Applicable Wiring Diagram for Fuse Positions
- *2 Refer to Applicable Engine Wiring Diagram
- *3 For Vehicles with Automatic Transmission
- *4 Refer to Applicable Wiring Diagram for Automatic Transmission
- *5 For Vehicles with a Manual Transmission

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink

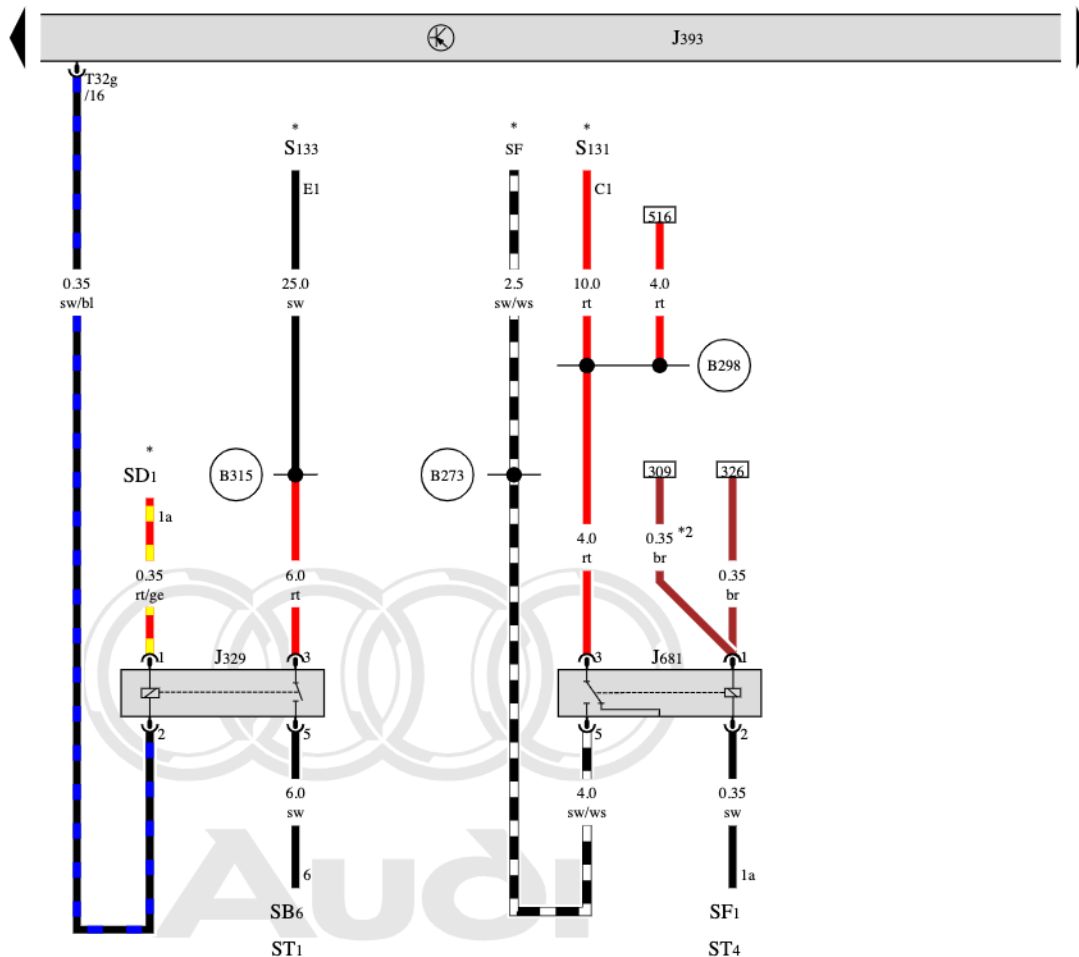


Terminal 15 Power Supply Relay, Comfort System Central Control Module, Terminal 15 Power Supply Relay 2

- J329 Terminal 15 Power Supply Relay
- J393 Comfort System Central Control Module
- J681 Terminal 15 Power Supply Relay 2
- SD1 Fuse 1 (On Fuse Panel D)
- SB6 Fuse 6 (On Fuse Panel B)
- S131 Safety Fuse 1
- S133 Safety Fuse 3
- SF Fuse Panel F
- ST1 Fuse Panel 1
- SF1 Fuse 1 (On Fuse Panel F)
- ST4 Fuse Panel 4
- T32g 32-Pin Connector
- B273 Positive Connection (15) (in Main Wiring Harness)
- B298 Positive Connection 2 (30) (in Main Wiring Harness)
- B315 Positive Connection 1 (30a) (in Main Wiring Harness)
- * Refer to Applicable Wiring Diagram for Fuse Positions
- *2 Avant

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

Windshield Antenna Suppression Filter, Rear Window Defogger Relay, Comfort System Central Control Module

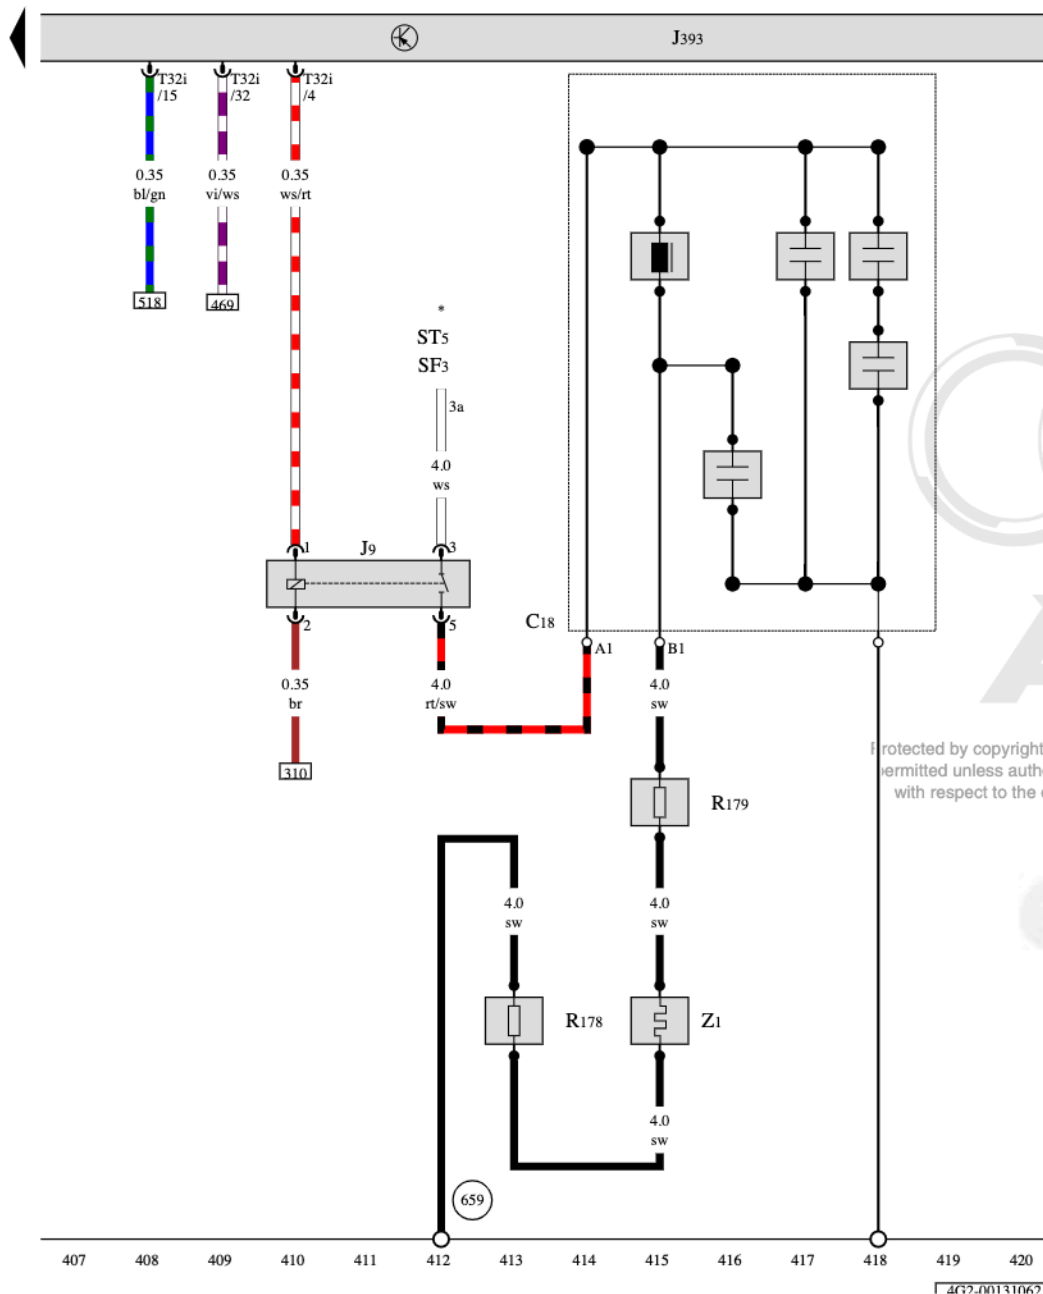

- C18 Windshield Antenna Suppression Filter
- J9 Rear Window Defogger Relay
- J393 Comfort System Central Control Module
- R178 Fm Frequency Filter in Negative Wire
- R179 Fm Frequency Filter in Positive Wire
- SF3 Fuse 3 (On Fuse Panel F)
- ST5 Fuse Panel 5
- T32i 32-Pin Connector
- Z1 Rear Window Defogger

- 659 Ground Connection 1 near Right Rear Window
- * Refer to Applicable Wiring Diagram for Fuse Positions

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink


Light Recognition Sensor, Automatic Dimming Interior Rearview Mirror Relay, Automatic Dimming Interior Rearview Mirror

- G399 Light Recognition Sensor
- J910 Automatic Dimming Interior Rearview Mirror Relay
- ST1 Fuse Panel 1
- SB2 Fuse 2 (On Fuse Panel B)
- ST3 Fuse Panel 3
- SF9 Fuse 9 (On Fuse Panel F)
- T8a 8-Pin Connector
- Y7 Automatic Dimming Interior Rearview Mirror

370 Ground Connection 5 (in Main Wiring Harness)

B283 Positive Connection 7 (15a) (in Main Wiring Harness)

- * For Vehicles with Automatic Dimming Interior Rearview Mirror
- *2 Refer to Applicable Wiring Diagram for Fuse Positions
- *3 For Vehicles Without High Beam Assist
- *4 Through May 2012
- *5 Not for Vehicles with Automatic Dimming Interior Rearview Mirror

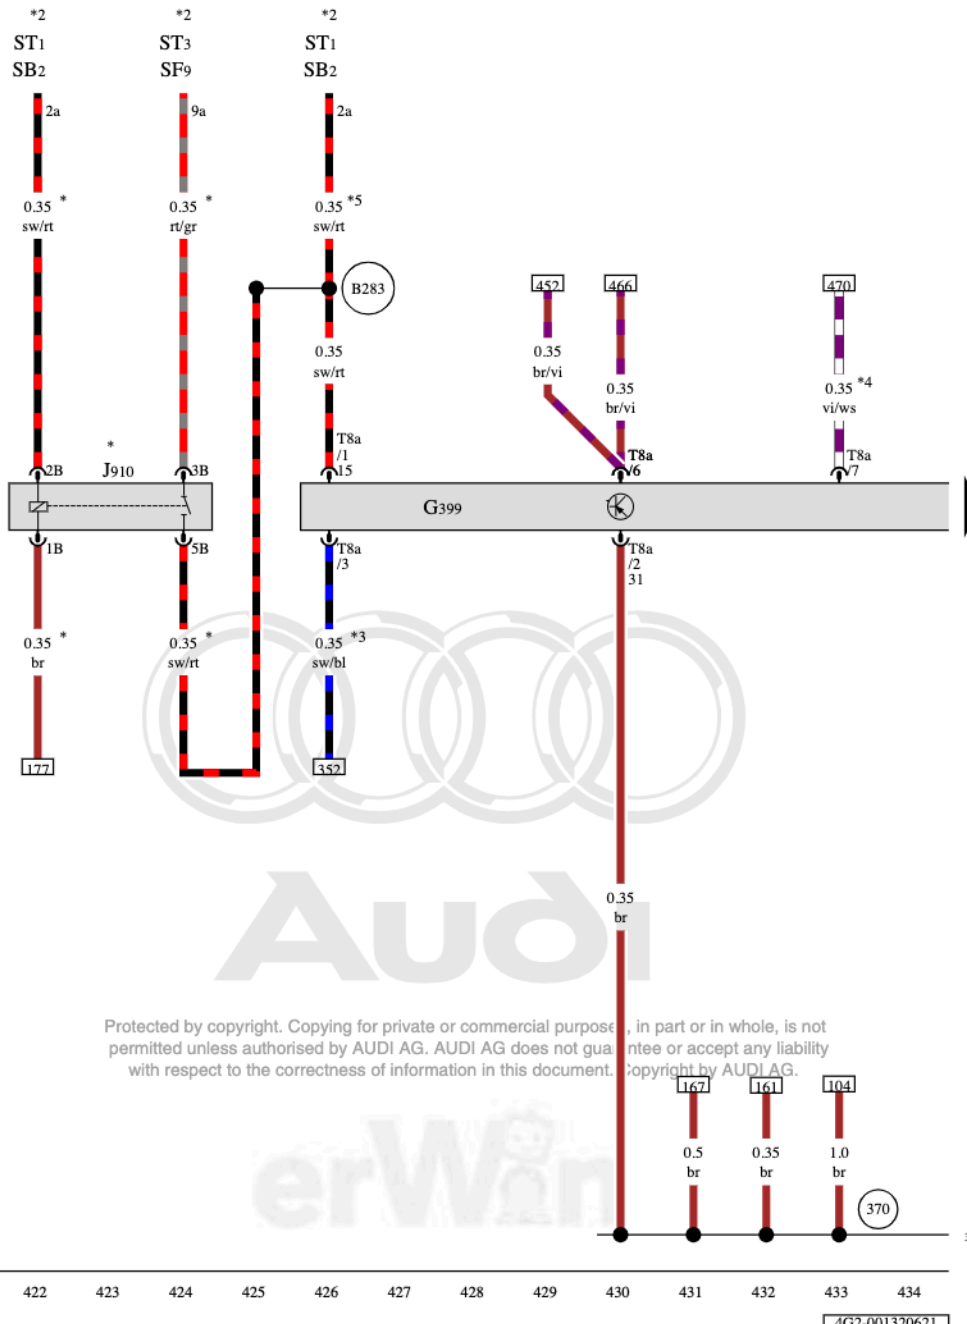

Humidity Sensor, Automatic High Beam Assist Control Module, Front Passenger Vanity Mirror Lamp, Driver Vanity Mirror Lamp, Automatic Dimming Interior Rearview Mirror

- F147 Driver Vanity Mirror Lamp Contact Switch
- F148 Front Passenger Vanity Mirror Lamp Contact Switch
- G355 Humidity Sensor
- J386 Driver Door Control Module
- J387 Front Passenger Door Control Module
- J844 Automatic High Beam Assist Control Module
- T2al 2-Pin Connector
- T2am 2-Pin Connector
- T2ao 2-Pin Connector
- T2ap 2-Pin Connector
- T8a 8-Pin Connector
- W14 Front Passenger Vanity Mirror Lamp
- W20 Driver Vanity Mirror Lamp
- Y7 Automatic Dimming Interior Rearview Mirror

370 Ground Connection 5 (in Main Wiring Harness)

B427 Mirror Auto-Dimming Signal Connection 1 (in Main Wiring Harness)


B428 Mirror Auto-Dimming Signal Connection 2 (in Main Wiring Harness)

B566 Connection 33 (in Main Wiring Harness)


Refer to Applicable Convenience System Wiring Diagram

*2 For Vehicles with High Beam Assist

*3 For Vehicles with a Humidity Sensor

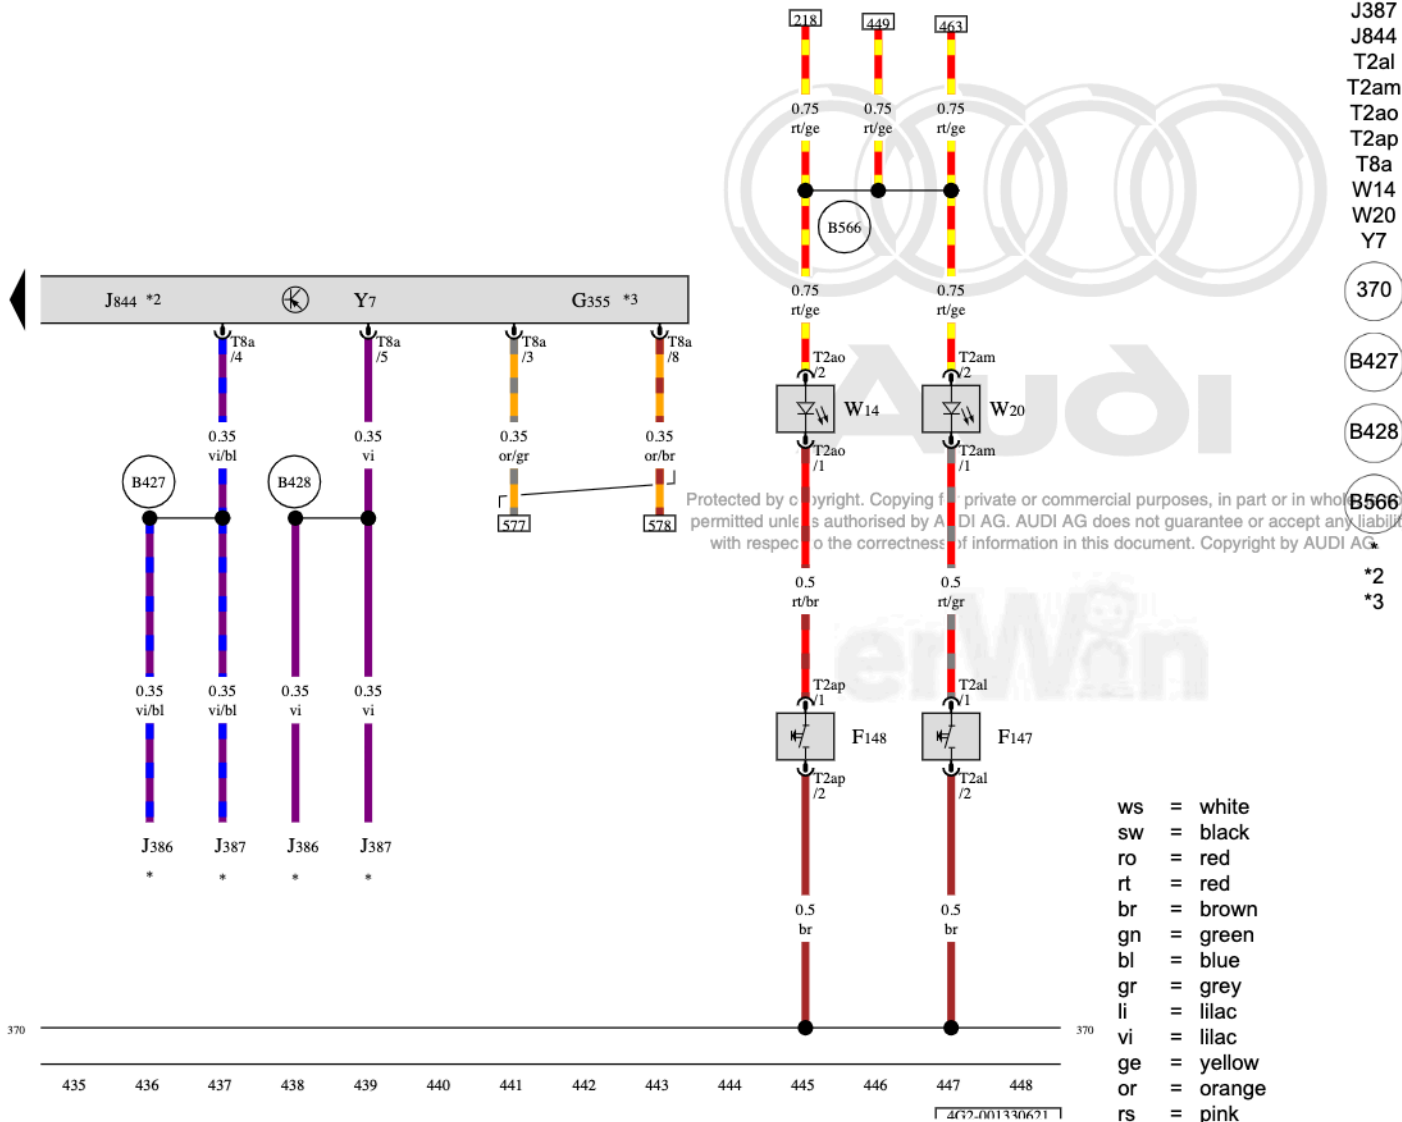

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink

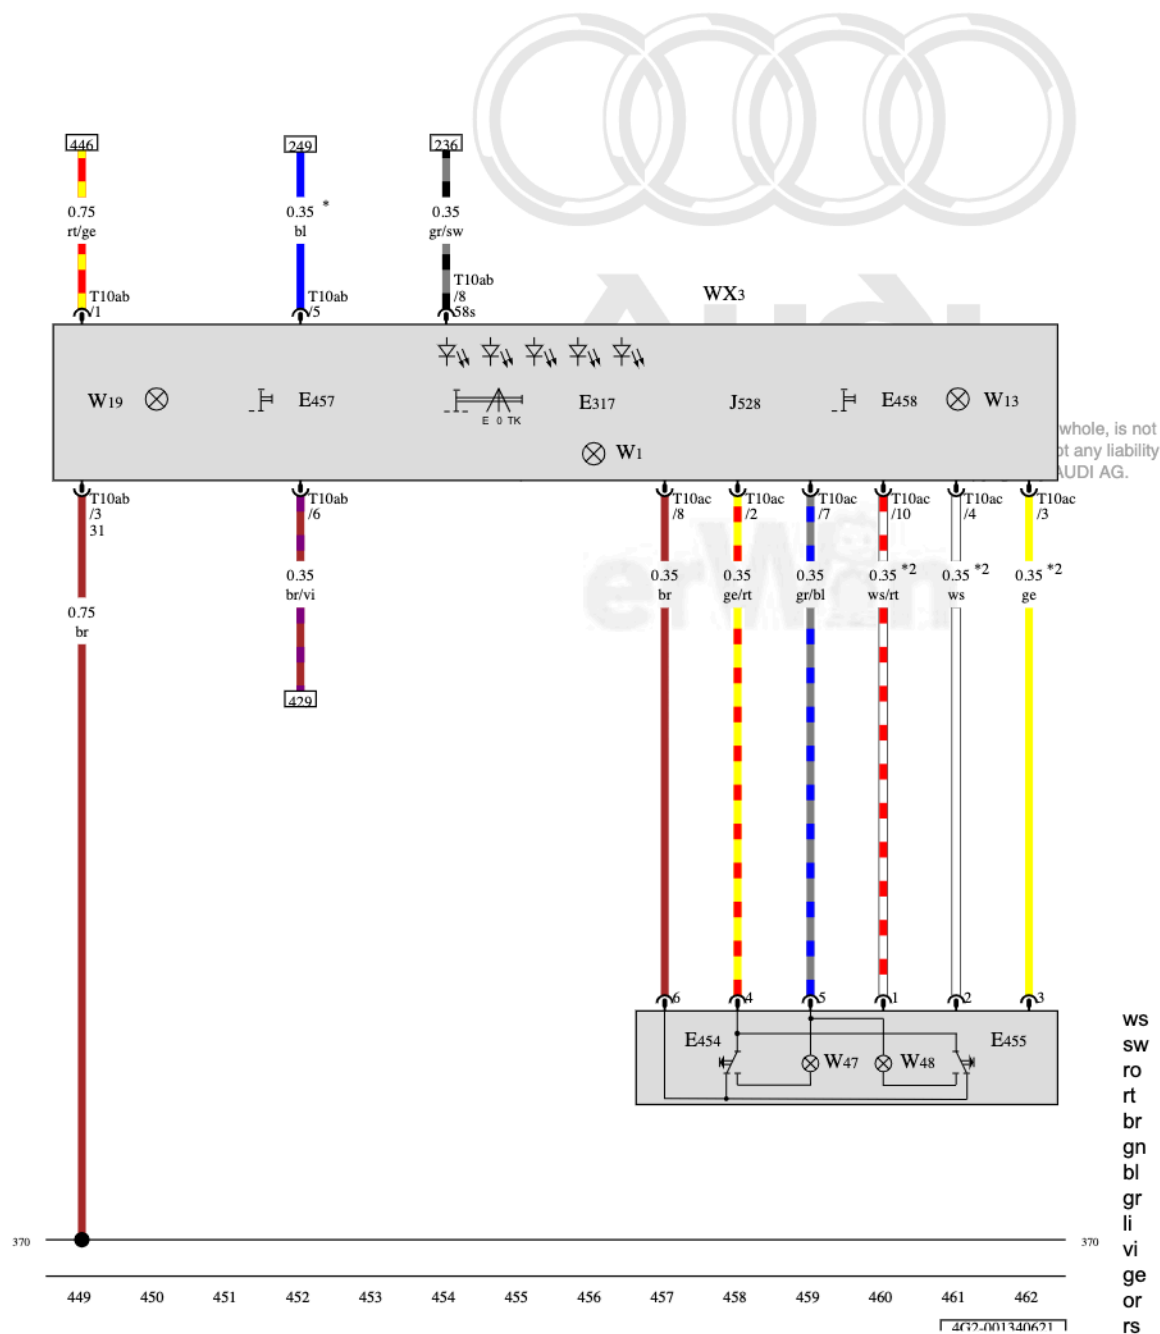


Front Passenger Reading Lamp, Driver Reading Lamp

- E317 Interior Lighting Switch
- E454 Left Rear Reading Lamp Switch
- E455 Right Rear Reading Lamp Switch
- E457 Driver Reading Lamp Button
- E458 Front Passenger Reading Lamp Button
- J528 Roof Electronics Control Module
- T10ab 10-Pin Connector
- T10ac 10-Pin Connector
- W1 Front Interior Lamp
- WX3 Front Roof Module
- W13 Front Passenger Reading Lamp
- W19 Driver Reading Lamp
- W47 Left Rear Interior Lamp
- W48 Right Rear Interior Lamp

370 Ground Connection 5 (in Main Wiring Harness)

- * The Color of the Wires Depends on Vehicle Equipment
- *2 Wire Has No Function

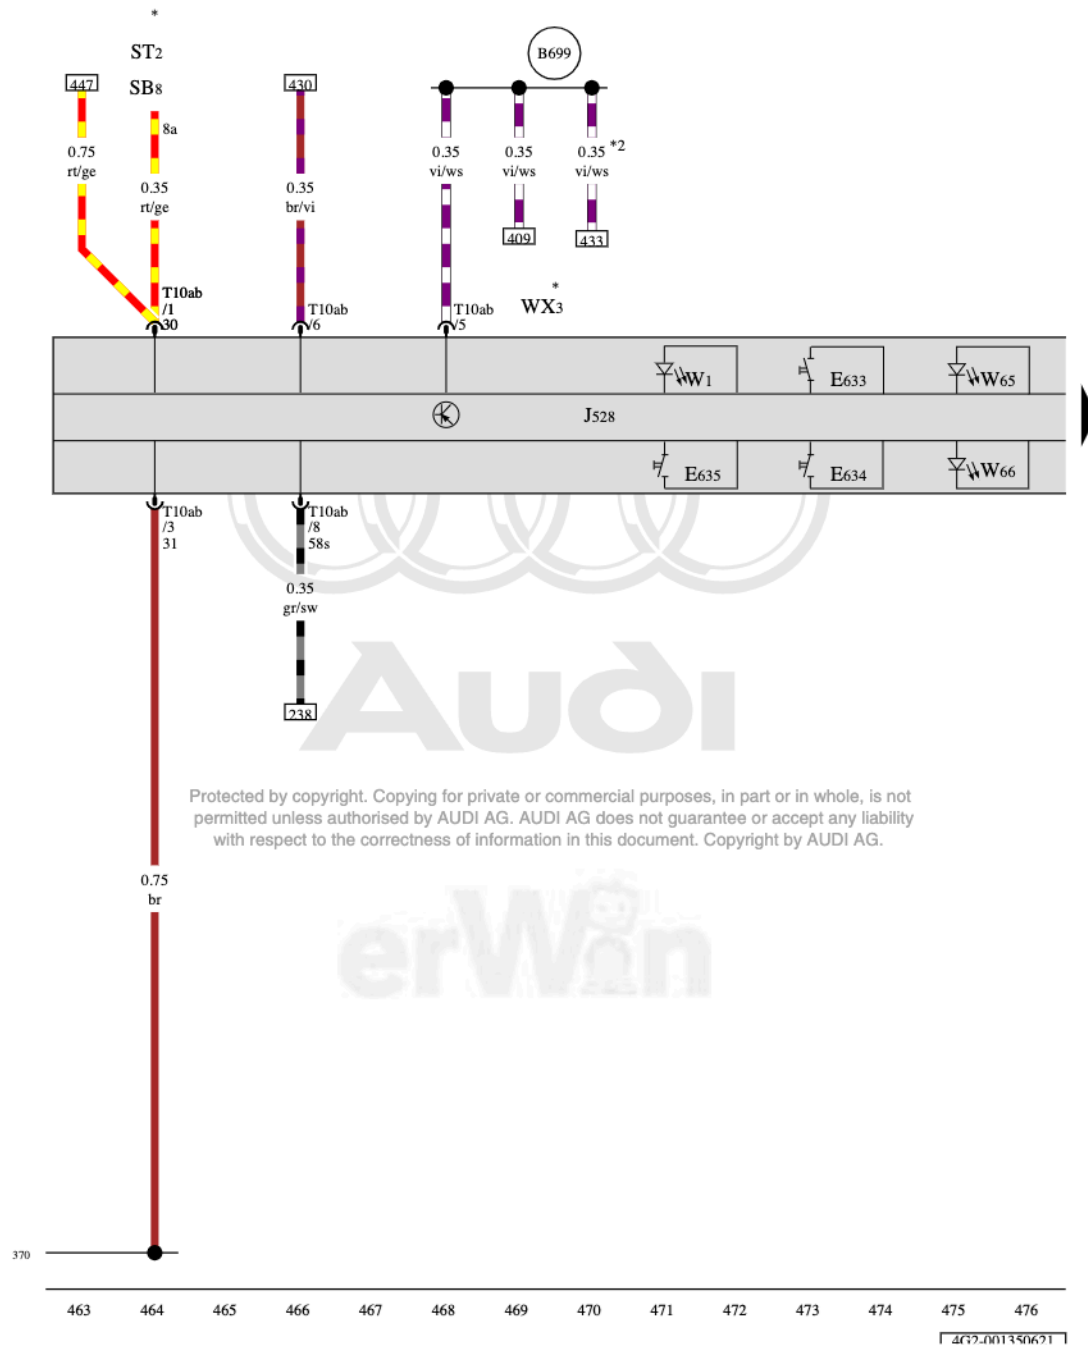

Front Interior Lamp, Front Roof Module

- | | |
|-------|---------------------------------|
| E633 | Left Front Reading Lamp Button |
| E634 | Right Front Reading Lamp Button |
| E635 | Rear Reading Lamp Front Button |
| J528 | Roof Electronics Control Module |
| ST2 | Fuse Panel 2 |
| SB8 | Fuse 8 (On Fuse Panel B) |
| T10ab | 10-Pin Connector |
| W1 | Front Interior Lamp |
| WX3 | Front Roof Module |
| W65 | Left Front Reading Lamp |
| W66 | Right Front Reading Lamp |

(370) Ground Connection 5 (in Main Wiring Harness)


(B699) LIN Bus Connection 4 (in Main Wiring Harness)

* For Vehicles with Highline Equipment
*2 Through May 2012


ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

Front Roof Module, Right Rear Interior Lamp

- E317 Interior Lighting Switch
- E392 Garage Door Opener Button 1
- E393 Garage Door Opener Button 2
- E394 Garage Door Opener Button 3
- E454 Left Rear Reading Lamp Switch
- E455 Right Rear Reading Lamp Switch
- T10ac 10-Pin Connector
- WX3 Front Roof Module
- W47 Left Rear Interior Lamp
- W48 Right Rear Interior Lamp
- * For Vehicles with Highline Equipment

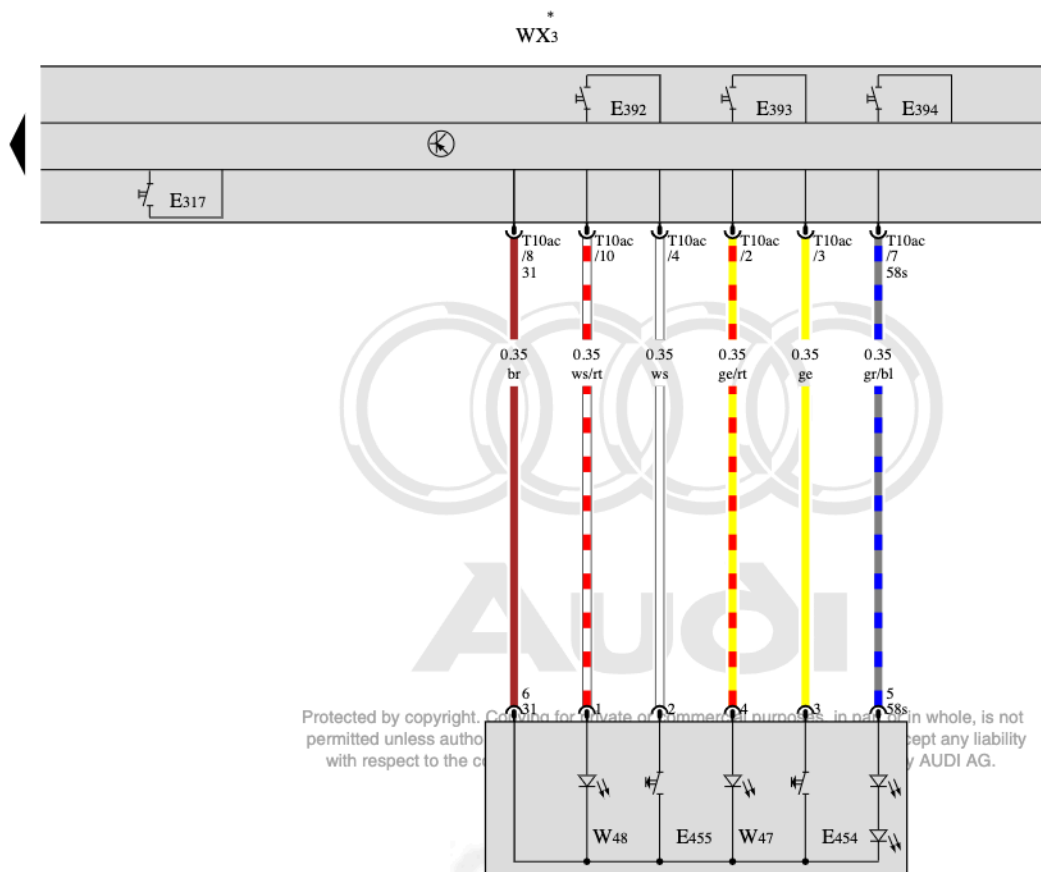

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

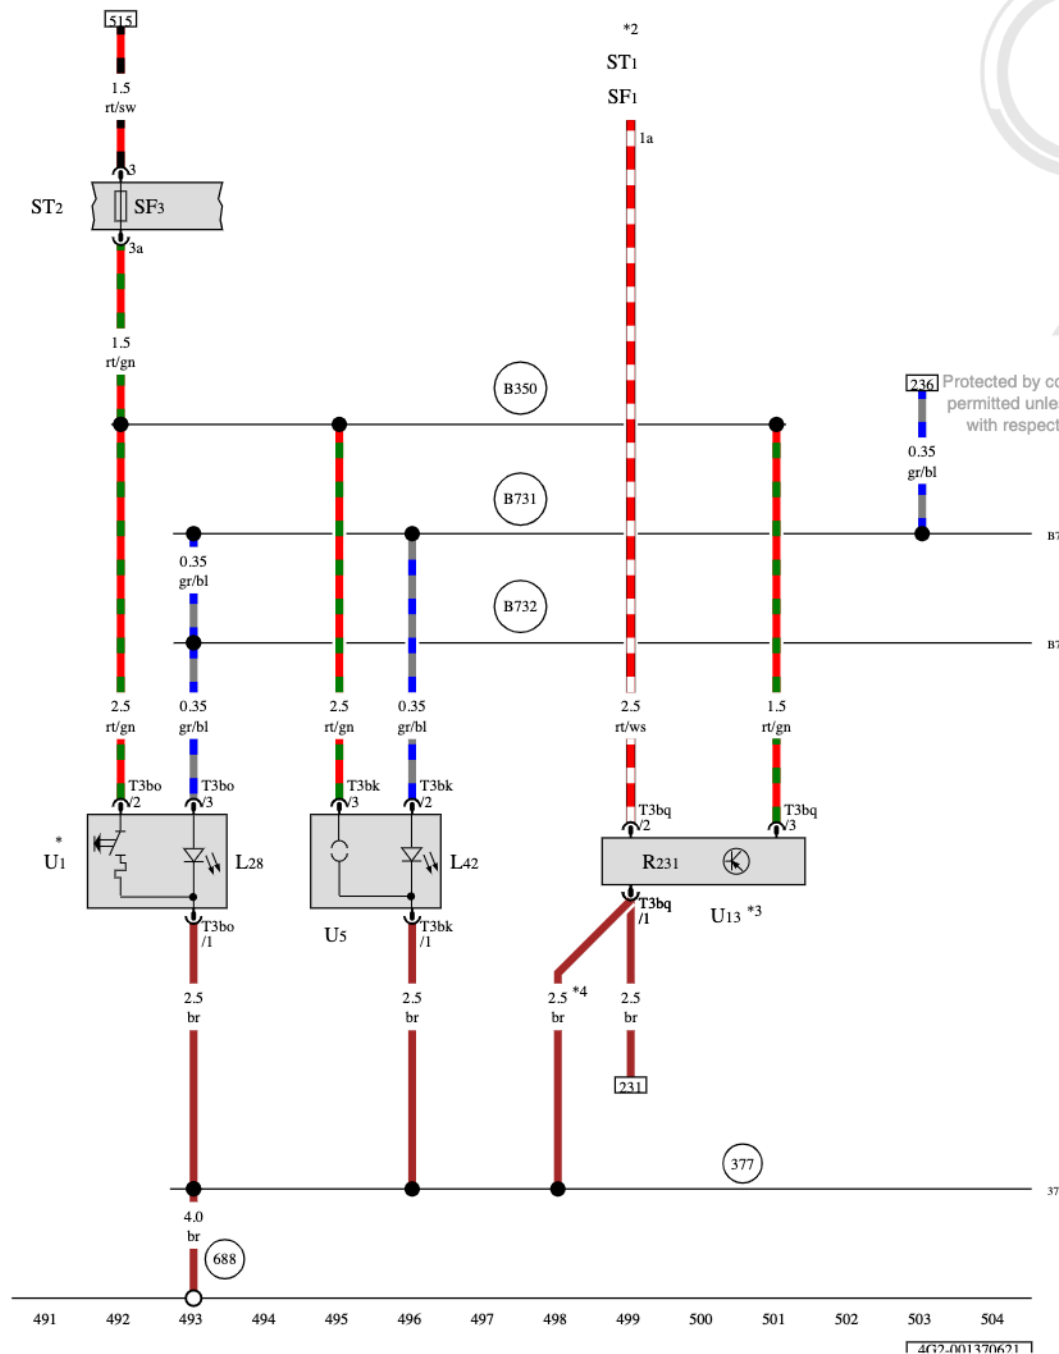


Cigarette Lighter, 12 V Socket, Converter with Socket, 12 V-230 V

- L28 Cigarette Lighter Illumination Bulb
- L42 Socket Illumination Bulb
- R231 External Audio Source Connection 2
- ST1 Fuse Panel 1
- SF1 Fuse 1 (On Fuse Panel F)
- ST2 Fuse Panel 2
- SF3 Fuse 3 (On Fuse Panel F)
- T3bk 3-Pin Connector
- T3bo 3-Pin Connector
- T3bq 3-Pin Connector

- U1 Cigarette Lighter, In the Front Center Console
- U5 12 V Socket, In the Center Console
- U13 Converter with Socket, 12 V-230 V

- 377 Ground Connection 12 (in Main Wiring Harness)
- 688 Ground Connection 2 on Center Tunnel
- B350 Positive Connection 1 (87a) (in Main Wiring Harness)
- B731 Connection 58s (in Main Wiring Harness) 1
- B732 Connection 58s (in Main Wiring Harness) 2

- * For Vehicles with a Smoking Package
- *2 Refer to Applicable Wiring Diagram for Fuse Positions
- *3 For Vehicles with China Equipment
- *4 From August 2011

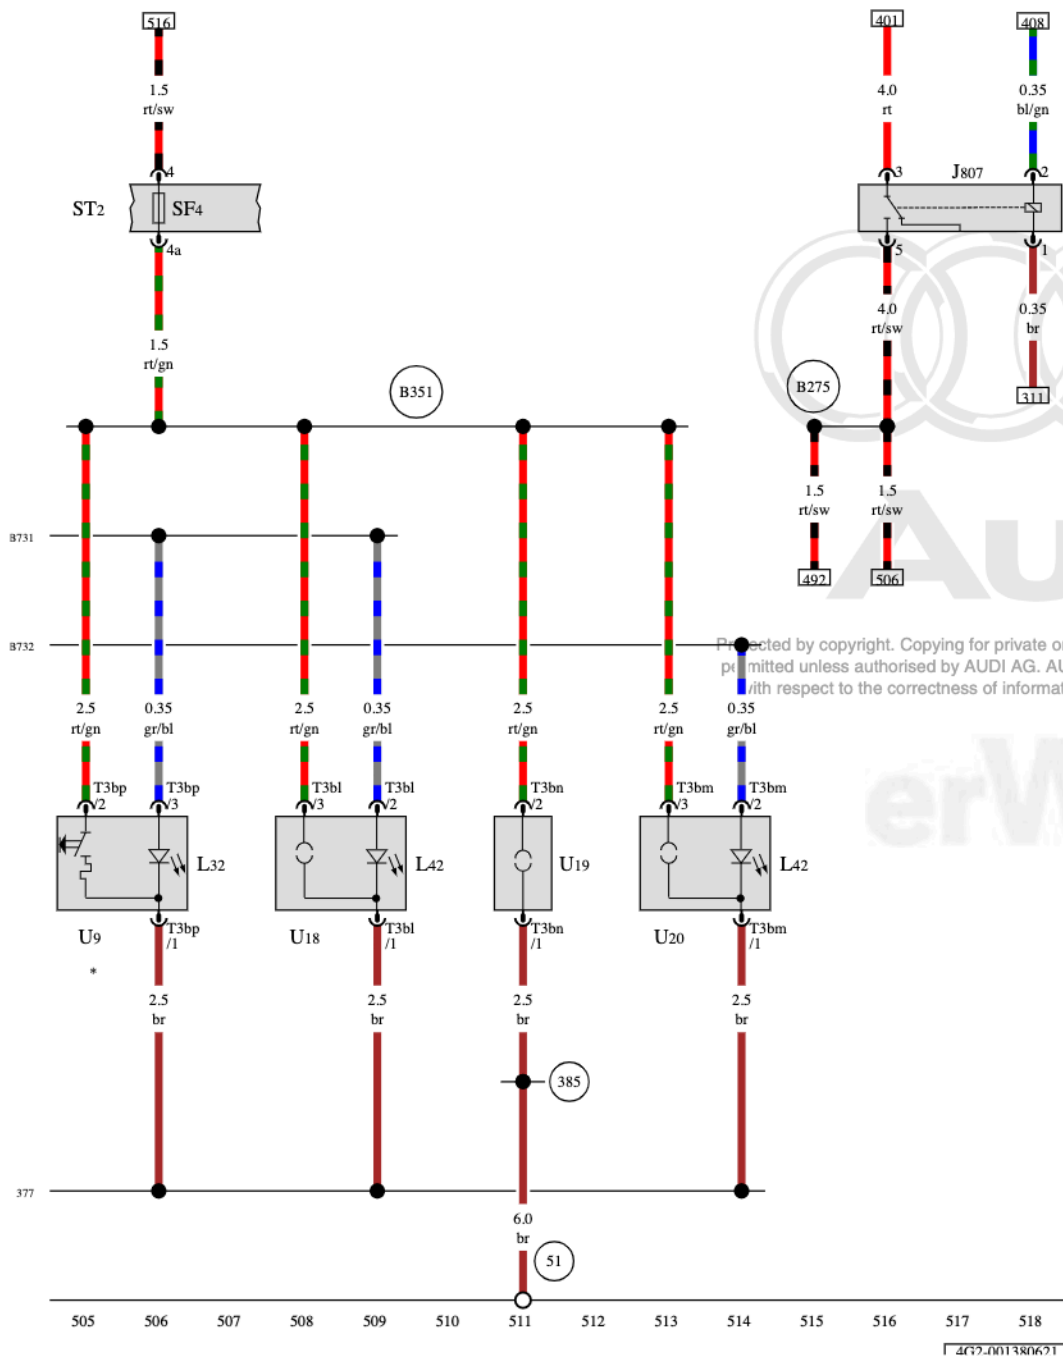

Sockets Relay, Rear Cigarette Lighter, 12 V Socket 2, 12 V Socket 3

- J807 Sockets Relay
- L32 Rear Cigarette Lighter Illumination Bulb
- L42 Socket Illumination Bulb
- ST2 Fuse Panel 2
- SF4 Fuse 4 (On Fuse Panel F)
- T3bl 3-Pin Connector
- T3bm 3-Pin Connector
- T3bn 3-Pin Connector
- T3bp 3-Pin Connector
- U9 Rear Cigarette Lighter, In the Rear Center Console
- U18 12 V Socket 2, In the Rear Center Console
- U19 12 V Socket 3, In the Luggage Compartment
- U20 12 V Socket 4, In the Rear Center Console
- 51 Ground Connection in Luggage Compartment, Right
- 377 Ground Connection 12 (in Main Wiring Harness)
- 385 Ground Connection 20 (in Main Wiring Harness)
- B275 Positive Connection (87) (in Main Wiring Harness)
- B351 Positive Connection 2 (87a) (in Main Wiring Harness)
- B731 Connection 58s (in Main Wiring Harness) 1
- B732 Connection 58s (in Main Wiring Harness) 2
- * For Vehicles with a Smoking Package


ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

Power Steering Control Module

- G269 Steering Torque Sensor
- J500 Power Steering Control Module
- S132 Safety Fuse 2
- T1d 1-Pin Connector, On the Left Front of the Vehicle Floor
- T2fa 2-Pin Connector
- T6ak 6-Pin Connector
- T6al 6-Pin Connector, In the Engine/Motor Compartment, Left Front, Bottom
- V187 Electromechanical Power Steering Motor

- 671 Ground Connection 1 on Left Front Longitudinal Member

* Refer to Applicable Wiring Diagram for Fuse Positions
*2 Data Bus Wire (Flexray Bus)

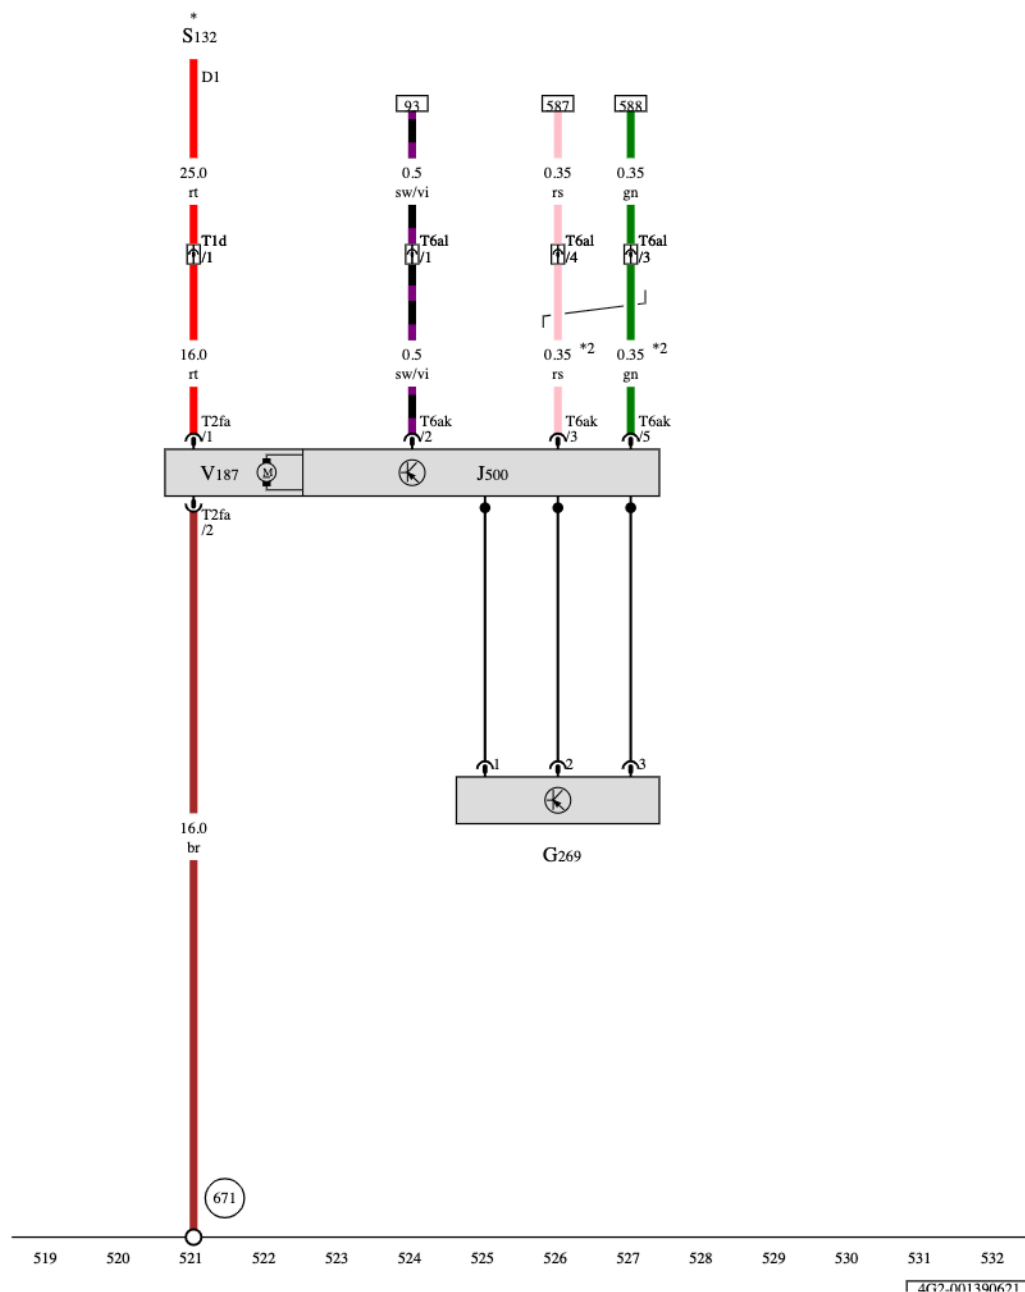


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Instrument Cluster Control Module

- J285 Instrument Cluster Control Module
- K1 High Beam Indicator Lamp
- K47 ABS Indicator Lamp
- K261 Left Turn Signal Indicator Lamp
- ST1 Fuse Panel 1
- SC6 Fuse 6 (On Fuse Panel C)
- T32 32-Pin Connector
- Y24 Display Unit in Instrument Cluster

- 45 Ground Connection Behind Instrument Panel, Center
- 199 Ground Connection 3 (in Instrument Panel Wiring Harness)
- 332 Ground Connection 4 (in Instrument Panel Wiring Harness)
- A164 Positive Connection 2 (30a) (in Instrument Panel Wiring Harness)
- * Refer to Applicable Wiring Diagram for Fuse Positions
- *2 For Vehicles with Heated Steering Wheel

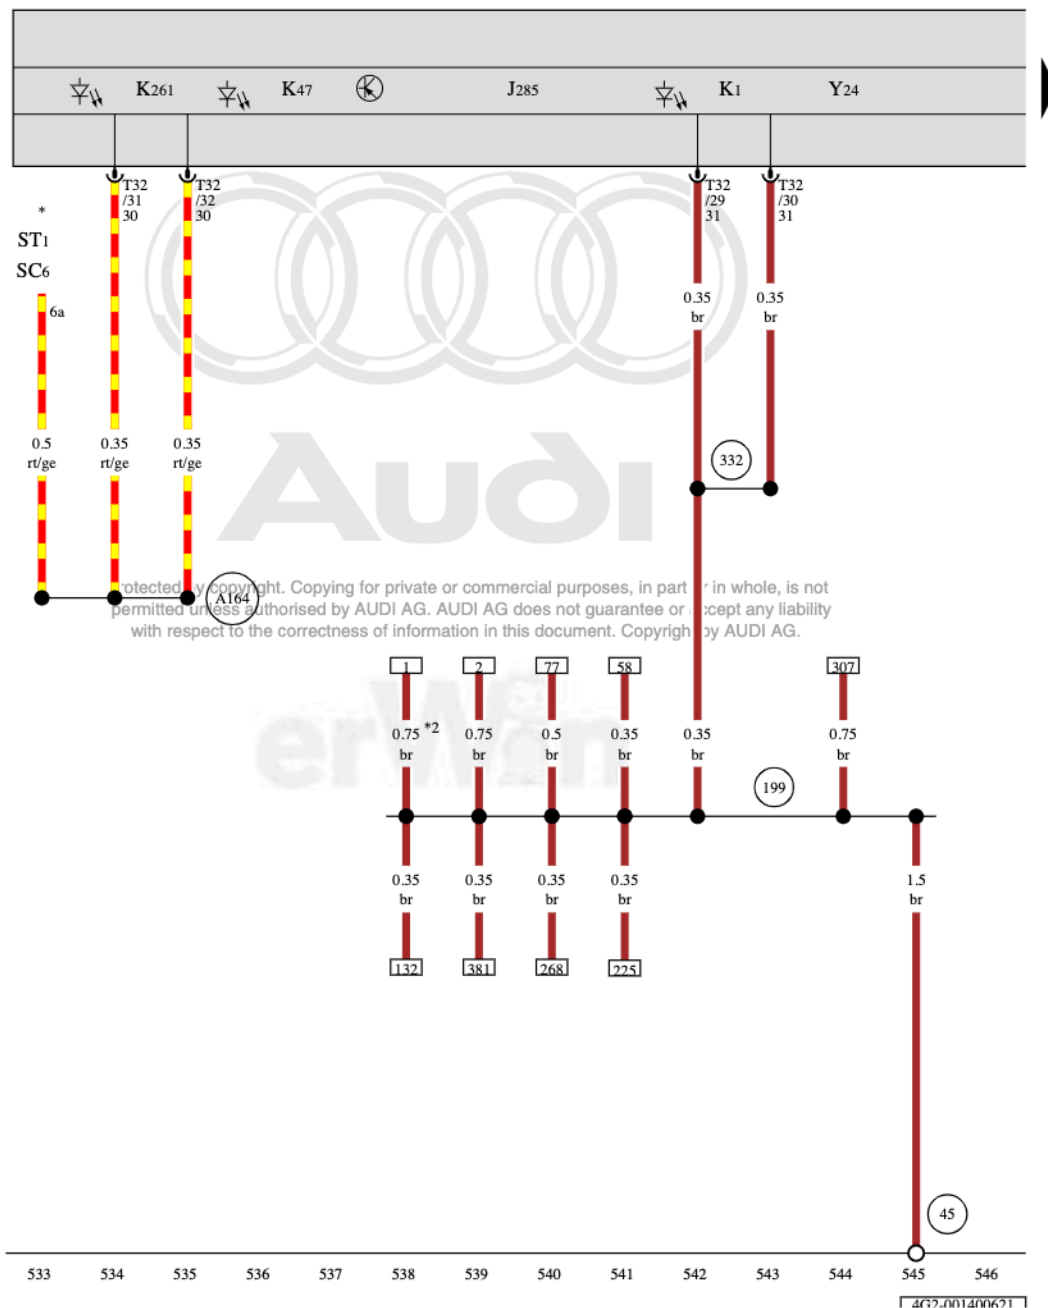

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Display Unit Button, Instrument Cluster Control Module

- E506 Display Unit Button
- J285 Instrument Cluster Control Module
- J794 Information Electronics Control Module 1
- J853 Night Vision System Control Module
- K75 Airbag Indicator Lamp
- K104 Diesel Electronics Indicator Lamp
- K149 Engine Electronics Indicator Lamp
- T2bh 2-Pin Connector, Right Front Center Console
- T2bm 2-Pin Connector
- T6q 6-Pin Connector
- T17f 17-Pin Connector, Near the A-Pillar
- T17g 17-Pin Connector, Near the A-Pillar
- T32 32-Pin Connector


B159 Diagnostic Connection (in Interior Wiring Harness)

B444 OBD Connection 1 (in Main Wiring Harness)

- * Depending on Equipment
- *2 Refer to Applicable Wiring Diagram for Data Bus Networking
- *3 Refer to Applicable MMI (Information Electronics) Wiring Diagram
- *4 Fiber Optic Cable


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

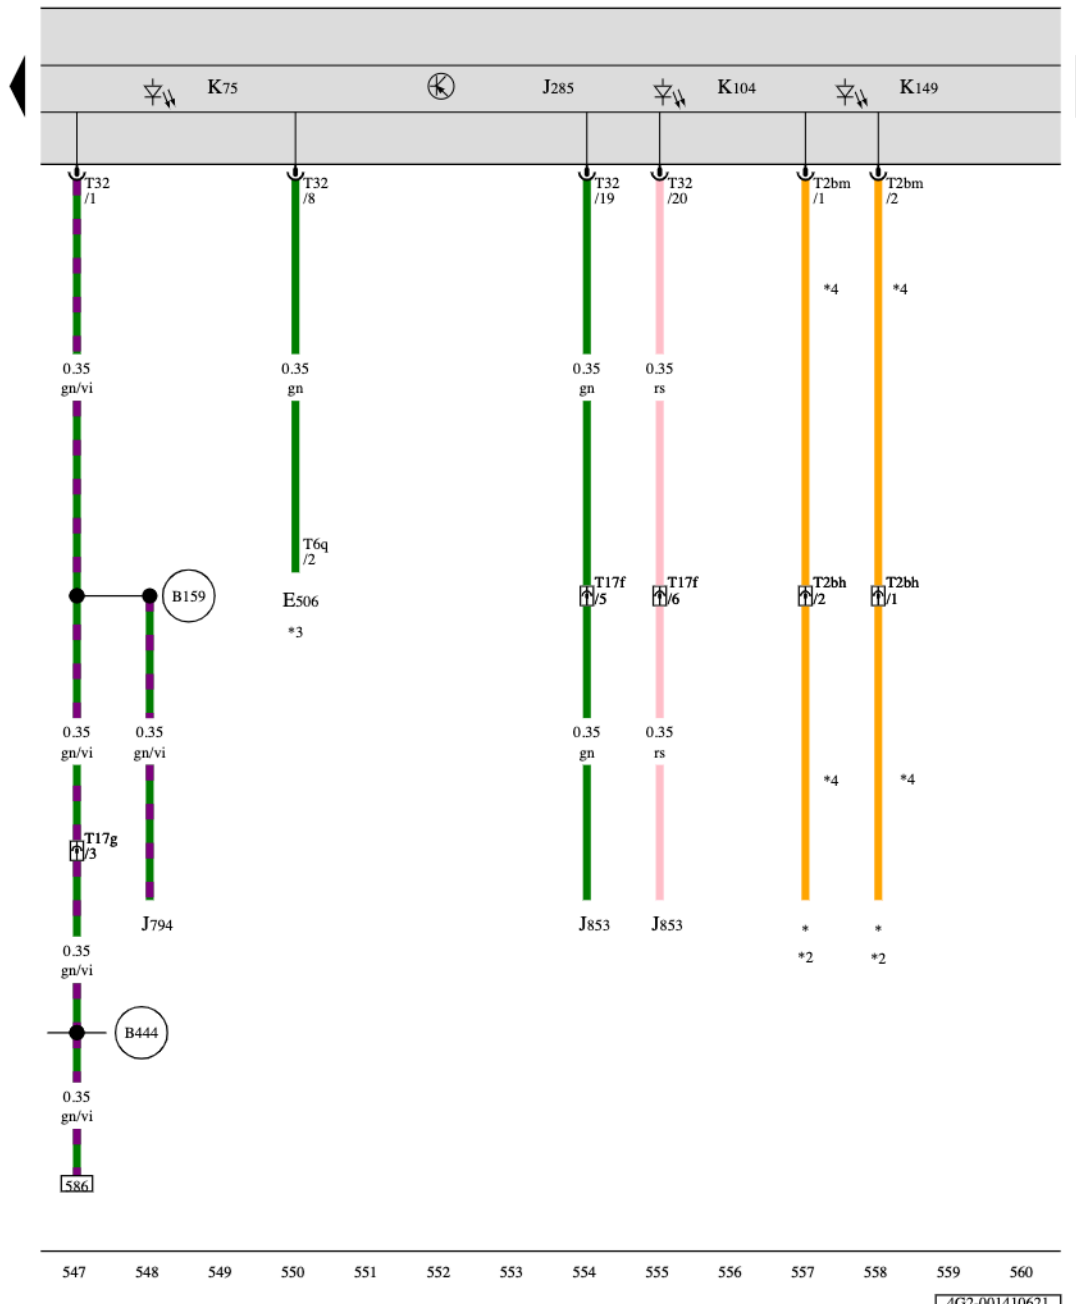

Fuel Gauge, Fuel Level Sensor 2, Instrument Cluster Control Module

- G Fuel Level Sensor
- G1 Fuel Gauge
- G169 Fuel Level Sensor 2
- J285 Instrument Cluster Control Module
- K262 Right Emergency Flasher Indicator Lamp
- T6aq 6-Pin Connector
- T17h 17-Pin Connector, Near the A-Pillar
- T32 32-Pin Connector
- 411 Sensor Ground Connection 2 (in Main Wiring Harness)

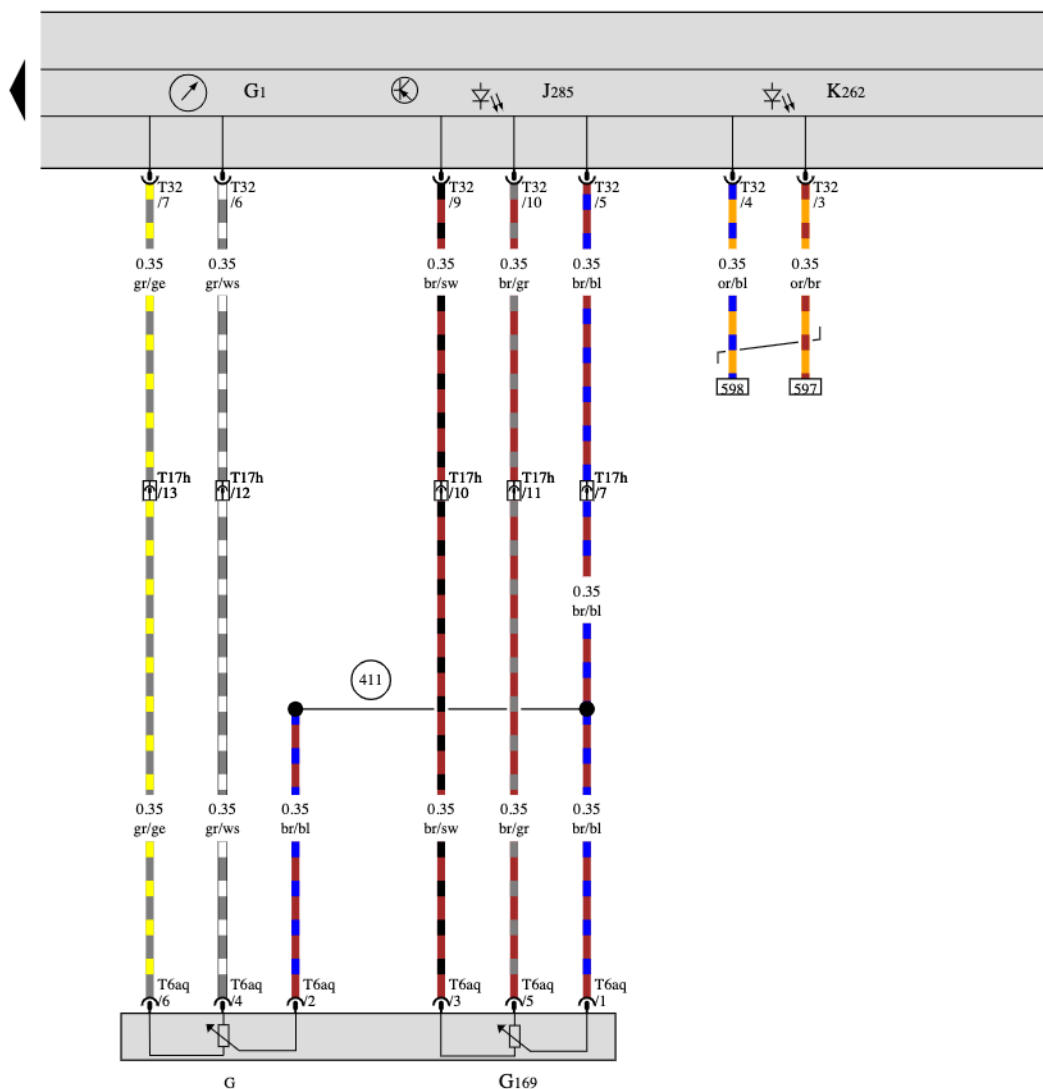

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Data Bus on Board Diagnostic Interface


- J217 Transmission Control Module
- J533 Data Bus on Board Diagnostic Interface
- J623 Engine/Motor Control Module
- T17a 17-Pin Connector, Left Plenum Chamber E-Box Connector Station
- T32b 32-Pin Connector
- T46a 46-Pin Connector
- T46b 46-Pin Connector
- TV33 Powertrain CAN Bus High Wire Junction
- TV37 Powertrain CAN Bus Low Wire Junction
- TV41 Extended CAN Bus High Wire Junction
- TV42 Extended CAN Bus Low Wire Junction
- TV79 Powertrain CAN Bus High Wire Junction 2
- TV82 Powertrain CAN Bus Low Wire Junction 2

- B108 CAN Bus Extended High Connection 1 (in Main Wiring Harness)
- B109 CAN Bus Extended Low Connection 1 (in Main Wiring Harness)
- B383 Powertrain CAN Bus High Connection 1 (in Main Wiring Harness)
- B390 Powertrain CAN Bus Low Connection 1 (in Main Wiring Harness)
- E93 CAN Bus High Connection 1 (in Engine Wiring Harness)
- E94 CAN Bus Low Connection 1 (in Engine Wiring Harness)

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

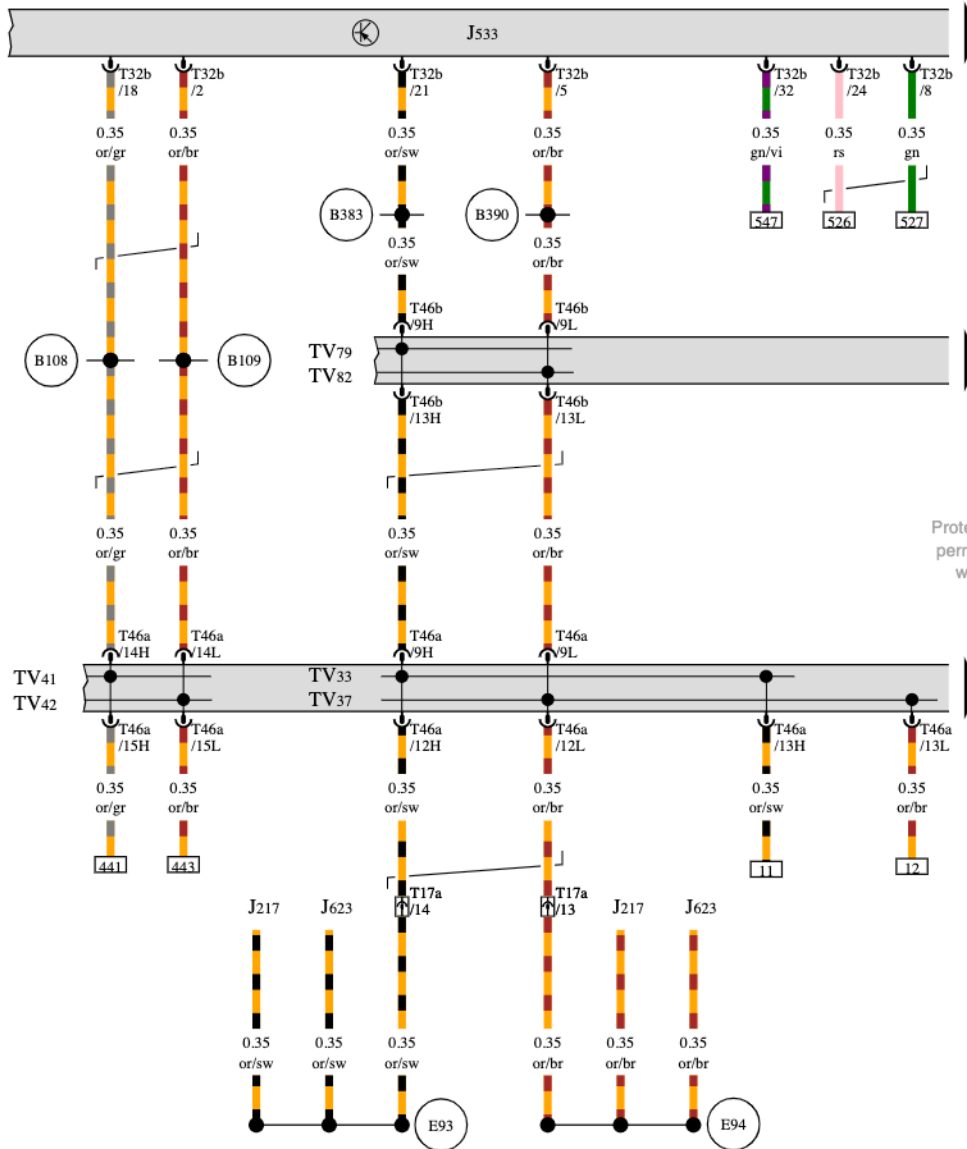

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

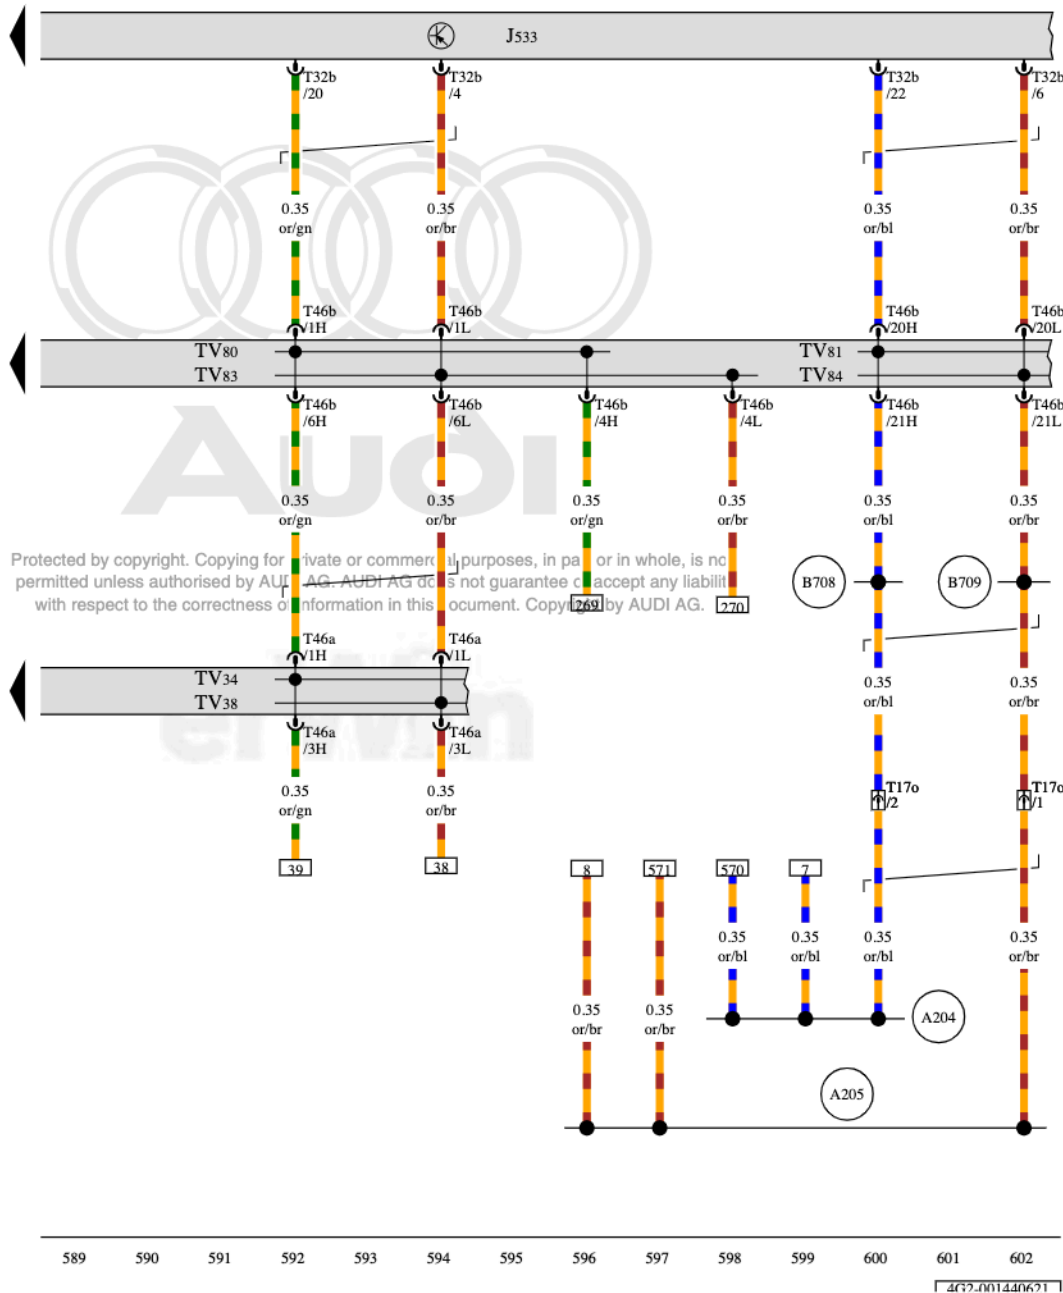

Data Bus on Board Diagnostic Interface, Comfort System CAN Bus High Wire Junction, Comfort System CAN Bus High Wire Junction 2

- J533 Data Bus on Board Diagnostic Interface
- T17o 17-Pin Connector, Near the A-Pillar
- T32b 32-Pin Connector
- T46a 46-Pin Connector
- T46b 46-Pin Connector
- TV34 Comfort System CAN Bus High Wire Junction
- TV38 Comfort System CAN Bus Low Wire Junction
- TV80 Comfort System CAN Bus High Wire Junction 2
- TV81 Instrument Cluster CAN Bus High Wire Junction 2
- TV83 Comfort System CAN Bus Low Wire Junction 2
- TV84 Instrument Cluster CAN Bus Low Wire Junction 2
- A204 Instrument Cluster CAN Bus High Connection (in Instrument Panel Wiring Harness)
- A205 Instrument Cluster CAN Bus Low Connection (in Instrument Panel Wiring Harness)
- B708 Instrument Cluster CAN Bus High Connection 1 (in Main Wiring Harness)
- B709 Instrument Cluster CAN Bus Low Connection 1 (in Main Wiring Harness)

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink